


1983 AMC Renault Fuego Turbo and non-turbo Wiring Diagrams

Scanned and edited by Mark L. Bardenwerper, Sr. October 25, 2023 Originals, courtesy Mike Spangler


	L										LUG TERMINALS	
COMPONENT	GRID	SYMBOL	COMPONENT	GRID	SYMBOL	COMPONENT	GRID	SYMBOL	LUG	GRID	CAR LOCATION	PLUG
A/C - HEATER CONTROL PANEL ASSY	3H 4H		STOP RIGHT TAIL LEFT	31H 30H	DS19 DS18	SWITCHES A/C - HEATER BLOWER MOTOR		537	7,	7.4		<u>_GY</u> Ø P3
ALTERNATOR	2B		TAIL RIGHT	31H	DS19	A/C - HEATER CONTROL PANEL	214	S39	12	18A	Positive terminal of battery Negative terminal of battery	
ALTITUDE CORRECTION MODULE	44H		TURIN SIGNAL, IND	57H 35C	DS17 DS20	AIR TO AIR EXCHANGER SAFETY BACK UP LAMP (MANUAL TRANS	23H 23D	S47 S7	T3	1C.6A	Engine ground. Under car, left front, next to oil pan on engine	REGULATOR
			TURN SIGNAL LEFT FRONT TURN SIGNAL RIGHT FRONT	34H 35H	DS22 DS23	BRAKE FLUID LEVEL IND BRAKE PAD SENSOR LEFT	16H 17H	59 511	T4	10H.27D.23J	Ground Under hood rear center of engine compart ment on heater blower motor support bracket	
BATTERY BRAKE PAD SENSOR, LEFT	8 A 17H	BATTERY	TURN SIGNAL, LEFT REAR	36H	DS24	BRAKE PAD SENSOR, RIGHT	17H	\$12	T5	4.4	+ 12V Under hood left side of engine on starter	
BRAKE PAD SENSOR, RIGHT	128	S12	TURN SIGNAL RIGHT REAR	36H	<u>DS25</u>	CHANGEOVER LEFT (DOOR LOCK SYS)	51D	\$31	_	48 18	+ 12V Under hood left side of engine on starter + 12V Under hood left front of engine on alter	
CIGAR LIGHTER ASSY.	27F	R6	AIC BLOWER	10J	B13	CHANGEOVER RIGHT (DOOR LOCK SYS)	500	S30	та	2C. 20J	nator Ground Under hood left front of engine on alter	ALTERNATOR
CIRCUIT BREAKERS: AIR CONDITIONING	45	CR4	AUXILIARY COOLING FAN	76		COMBINATION	58B-63B	\$33			nator	ALIENNATUR
AUXILIARY COOLING FAN MOTOR	6F	CB2	(A/C SYS,) FUEL PUMP	44C	83 68	COOLANT THERMAL DOOR JAM LEFT	296	S1 S19	-	16C, 15G 57G 56J	Ground Inside car under dash left of steering column on cowl panel next to speedo cable	
MAIN COOLING FAN MOTOR SUNROOF MOTOR	40 38J	CB1 CB3	HEATER BLOWER MAIN COOLING FAN	10G 4E	B11 B2	DOUR JAM RIGHT DOOR LOCK	29E	S18 S24	T10	58J 18J.30C.	Ground Inside luggage compartment right of left	
CLOCK ASSY.	28G	DS27 K27	REAR WINDOW WIPER	18E	B5	ENRICHMENT	43G	549		50H 59J	rear tail light	
CLUTCH A/C COMPRESSOR			SUNROOF	38G	814	FIFTH (5th) GEAR (TURBO CIRCUIT)	21J	S45		10D	Ground Under hood left front on frame Ground Under hood on ignition coil	
DIAGNOSTIC CONNECTORS:			WINDOW LEFT WINDOW RIGHT	45E 49E	89 810	GLOVE BOX LAMP HANDBRAKE	61E 16J	534 58		7D.24E 54G 59G	Ground Under hood left front on frame	K2
ENGINE	12H	J15	WINDSHIELD WASHER PUMP WINDSHIELD WIPER	24D 27D	86 87	HAZARD WARNING HEATER BLOWER MOTOR	36E	\$25 \$37	T14	6E 7G.24H.	Ground Under hood right front of frame	COOLING FAN MOTOR RE
FUEL INJECTION	39J-45J	P146	NOSE SUPRESSOR	110	C1	HIGH PRESSURE A/C	11H	S43	-	2D.61H 63H 55A	+ 12V Inside car left side of steering column on	
DIODES: A/C CIRCUIT	7E	D7 ·	OIL LEVEL SENDER	20H	R5	HORN	59C	533 52	T 16	11H 13F	light switch Ground Under hood right rear of engine on	
A/C CIRCUIT A/C HEATER CONTROL PANEL	7F	D11	OIL PRESSURE SENDER OXYGEN SENSOR (F I SYSTEM)	16J 40H	S10	INTERIOR (DOOR LOCK SYS)	51C 29D	S32 S17		15C	cylinder head	
ALTERNATOR	10	D1-D6	POWER WINDOW SYSTEM	45 49		KEY IN	30E	\$20			Ground Under hood top center of engine compart ment frame	
INSTRUMENT CLUSTER P.C.B. SUNROOF MOTOR	16G 38J	D9 D10	FORTER MINDOW STSTEM			LIGHT LOW PRESSURE A/C	58B 10H	S33 S42	T 18 T 19	10F 45D 50D.	Ground Under hood on distributor Ground Inside car between A/C blower motor and	CB-1
DISTRIBUTOR	10E		RADIO REAR WINDOW DEFOGGER	29F 17E	R1	MAP LAMP	29D	S16	-	53J.37F	shift lever on chassis	CIRCUIT BREAKER
DOOR LOCK SYSTEM	49-51		REAR WINDOW DEFOGGER SW			OIL PRESSURE SENDER	16J	S36 S10	T21		Ground Under hood, on right side of ignition coil Ground Inside car under head liner in front of left	CHOUL BREAKER
ELECTRONIC FUEL CONTROL UNIT	39F-44F	P141	ASSY REAR WINDOW WIPER MOTOR	17C 53F	S5	OVER BOOST MICROSWITCH, SUNROOF	39H 38J	548 53	T22	17E	Interior lamp Ground Inside luggage compartment on lower-	BK ON I
ELECTRONIC IGNITION CONTROL			ASSY REAR WINDOW WIPER SW ASSY	18E 19C	85 56	PRESSURE DIFFERENTIAL (TURBO				41J	right lift gate bracket	
UNIT	100		RELAYS. SOLENOIDS. ETC	· • • •		CIRCUITI RADIATOR THERMAL	3C	S46 S1		. !	Ground Under hood right rear cylinder head on throttle cable bracket	
FLASHER	358	K12	A/C #1 A/C #2	6G 8H	K4 K32	REAR INTERIOR LAMP REAR WINDOW DEFOGGER	28D 17C	S40 S5		7J 12J 37J 18E 20E	Ground Inside car left side of A/C blower motor Ground Inside luggage compartment, on rear with	MAIN COOLING FAN MOTO
FLOWMETER (FUEL INJECTION		`	A/C #3	8J 8G	K33 K31	REAR WINDOW WIPER	19C	S6	T28	! !	dow wiper motor bracket	
SYSTEM) FUEL INJECTION DIAGNOSTIC	42E	· ·	A/C #5	6H	K26	SEAT BELT STOP LAMP	24H 31C	S14 S22	129	29E	Ground Inside car on left door jam switch Ground Inside car on right door jam switch	
CONNECTOR FUSES:	391 451	P146	AIC #6 AIC FAST IDLE SOLENOID	6J 11H	K27 K24	SUNROOF MOTOR THERMAL COOLANT TIME	37F 37H 44E	S41 S26	T30 ·	3G	Ground Inside car on A/C heater control panel (where diode 'D8' is mounted)	
PANEL P.C.B	148-36B	F12 F16 F13	AIR TO AIR EXCHANGER AUXILIARY AIR REGULATOR	23G	K34	THERMO CONTACT (TURBO			T31	30E	Ground Inside car, under head liner in front of map	
		F11 F8 F15 F4 F7 F5 F6	(FI SYSTEM)	43E	K18	CIRCUITI THROTTLE POSITION (F SYS)	21H 42H	S44 S27	T32	68	+ 12V Under hood right side of fire-wall near	
		F1 F17 F19		5E	К3	TURN SIGNAL WINDOW LEFT	34G	S33 S28	T35	4E 51A	+ 12V Inside car, left of steering column by light	
PANEL P.C.B.	46A-48A	F9 110	COLD START INJECTOR DOOR LOCK SOLENOID LEFT	44E 51F	K 19 K 23	WINDOW HIGHT	48E	S29	T36	39.1	Switch	
PANEL P.C.B.	55C-59C	F2. F3	DOOR LOCK SOLENOID, RIGHT	50F	K20	WINDOW RIGHT (LEFT SIDE) WINDSHIELD WIPER/WASHER	47D 25D	S21 S15			Ground Under hood on mounting bracket for turbo safety switch on fire wall	
GAUGES	18F	M2	E G R SOLENOID FLASHER	22J 358	K34 K12				T37	37J	Connection Inside car in sunroof panel to sunroof motor housing	. 5
OIL LEVEL TACHOMETER	20F 15F	M3	FUEL DOOR LOCK SOLENOID FUEL INJECTION	50H 39C	K21 K36				T38	8A	Ground. Battery Compartment.	КЗ
TURBO	57H		FUEL INJECTOR #1	40E	K14	TAIL LAMP ASSY . LEFT	30J. 58G	DS18			under cargo area floor right side	AUXILIARY COOLING FA
WATER TEMPERATURE	15F	M4	FUEL INJECTOR #2 FUEL INJECTOR #3	41E 41E	K15 K16	TAIL LAMP ASSY , RIGHT THERMOSTAT (A/C SYS)	31J. 60G 7F	DS19 R8				
HAZARD WARNING SWITCH ASSY HORN	36E 59C	S25	FUEL INJECTOR #4	42E 40C-44C	K17 K13A	TOP DEAD CENTER SENSOR TURBO CIRCUIT	12G	12		1 1		
			IGNITION ON		K138	AIR TO AIR EXCHANGER RELAY	23G	К35		!		
IGNITION COIL IGNITION KNOCK DETECTOR	8D 7D		KEY IN BUZZER	168 30C	K7 K10	AIR TO AIR EXCHANGER SAFETY SWITCH	23H	S47				
IGNITION SWITCH ASSY	11A. 37A	52	MAIN COOLING FAN MOTOR POWER WINDOW	2D 15B	K2 K6	E G R SOLENOID	44H 22J	K34				CB-2 P
IGNITION TIMING SENSOR	7C 15F-21F, 35C, 57E		REAR WINDOW DEFOGGER REAR WINDOW WIPER MOTOR	24B 18E	K25 K30	FIFTH (5th) GEAR SWITCH	21J	S45		I I		
	61C	[SEAT BELT BUZZER	24F	K8	OVER BOOST SWITCH	39C 39H	K36 S48		í I		P
A/C - HEATER CONTROL PANEL			STARTER SOLENOID WINDSHIELD WIPER TIMER	28 25F	K1 K9	PRESSURE DIFFERENTIAL SW THERMO CONTACT SWITCH	21J 21H	546 544				
(2 LAMPS) BACK-UP, LEFT	55H	DS13 DS11			<u> </u>	TURBO GAUGE LAMP	57H	DS17			HARNESSES	
BACK-UP, RIGHT	23F	DS12				VOLTAGE REGULATOR	2C					
BRAKE IND. BRAKE PAD WEAR INDICATOR	16F 17F	0\$2 D\$4	RESISTANCES			WATER TEMP SENDER (ENGINE)	15J	R2	COD	DE HA	RNESS	
CHARGE IND. CIGAR LIGHTER	15F 55H	DS1 DS14	CIGAR LIGHTER	27F	P16	WATER TEMP SENDER (F SYS)	41G	<u>87</u>	A	Front Main		AUXILIARY COOLING FA
CLOCK	55C	DS27	COOLANT TEMP SENDER COOLANT TEMP SENSOR (F I	15J	R2				В С	Rear Main Fuel Pump	S A/C Intermediate and Relay T Interior Lamp or Map	P
DOOR LOCK SWITCH IND. FASTEN SEAT BELT IND.	50D 21F	DS46 DS10	SYS) FUEL SENDER	41G 17H	A7 A3				D	Glove Box		
GLOVE BOX HAZARD WARNING IND.	61F 35C	DS40	INST CLUSTER LAMP RHEOSTAT	53E	R10				E	Tail Lamp	U Fuel Door Lock	
HAZARD WARNING SWITCH IND.	56F	DS21 DS31	OIL LEVEL SENDER	20H	R5				1 '	Left	s/Power Windows, V EGR Solenoid W Additional Cooling Fan	
HEADLAMP, LEFT HEADLAMP, RIGHT	62G 63G	DS43 DS44	REAR WINDOW DEFOGGER SWITCH LAMPS RHEOSTAT	17E 55E	R1 R11				G	Door Lock: Right	Power Windows. Motor	sı 🗡
HIGH BEAM IND. INSTRUMENT CLUSTER (5 LAMPS)	61C	DS42 DS45	THERMOSTAT (A/C SYS)	7F	R8				н	Seat Belt	Z License Plate Lamps	
INTERIOR, LEFT	290	DS16	SENDERS AND SENSORS						1	Fuel Inject		RADIATOR THERMAL SWIT
LICENSE PLATE, LEFT LICENSE PLATE, RIGHT	59G 50G	DS35 DS36	BRAKE PAD SENSORS (LEFT & RIGHT)	17H	S11 S12				J	Fuel Tank Sunroof	FB Left Rear Speaker GA Right Rear Speaker	
LOW FUEL IND	18F 30D	056	COOLANT TEMP SENDER	15J	R2				î.		mp/Glove Box SA A/C Thermostat and Diode	
LOW FUEL IND.	300	DS15 DS15	SYS ;	41G	R7				P	Brake Pad	Wear Warning	
LIFT GATE SUPPORTS (RIGHT AND LEFT)	21E		FUEL SENDER	17H 18H	R3 R4							
MARKER, LEFT REAR	58G	DS33	OIL LEVEL SENDER	20H	R5							
MARKER, RIGHT REAR OIL PRESSURE IND	50G 17F	DS38 DS3	OIL PRESSURE SENDER OXYGEN SENSOR (F SYS)	16J 40H	S10						WIRES	
OXYGEN SENSOR MAINT. IND PARKING, LEFT FRONT	19F 58G	DS7 DS22	TOP DEAD CENTER SENSOR	12G	L2							
PARKING, RIGHT FRONT	61G	DS23	SOLENOIDS (SEE RELAYS) SPARK PLUGS	9F					COD	ECOLOR		
PRNDL RADIO	56H 30F	DS26 DS28	SPEAKERS STARTER MOTOR ASSY	27 J 29 J	B 1				BE	-	BN Brown P Pink V Viole1	
	28D	D\$32	UT AND UT ASST	2A	'					Black	GN Green A Red W White	
REAR INTERIOR	•							1 .				
REAR INTERIOR REAR WINDOW DEFOGGER IND REAR WINDOW DEFOGER SW IND.	20F 56F	DS9 DS30							BL	Blue	GY Gray S Salmon Y Yellow O Orange	
REAR INTERIOR REAR WINDOW DEFOGGER IND	20F	DS9				-						


.

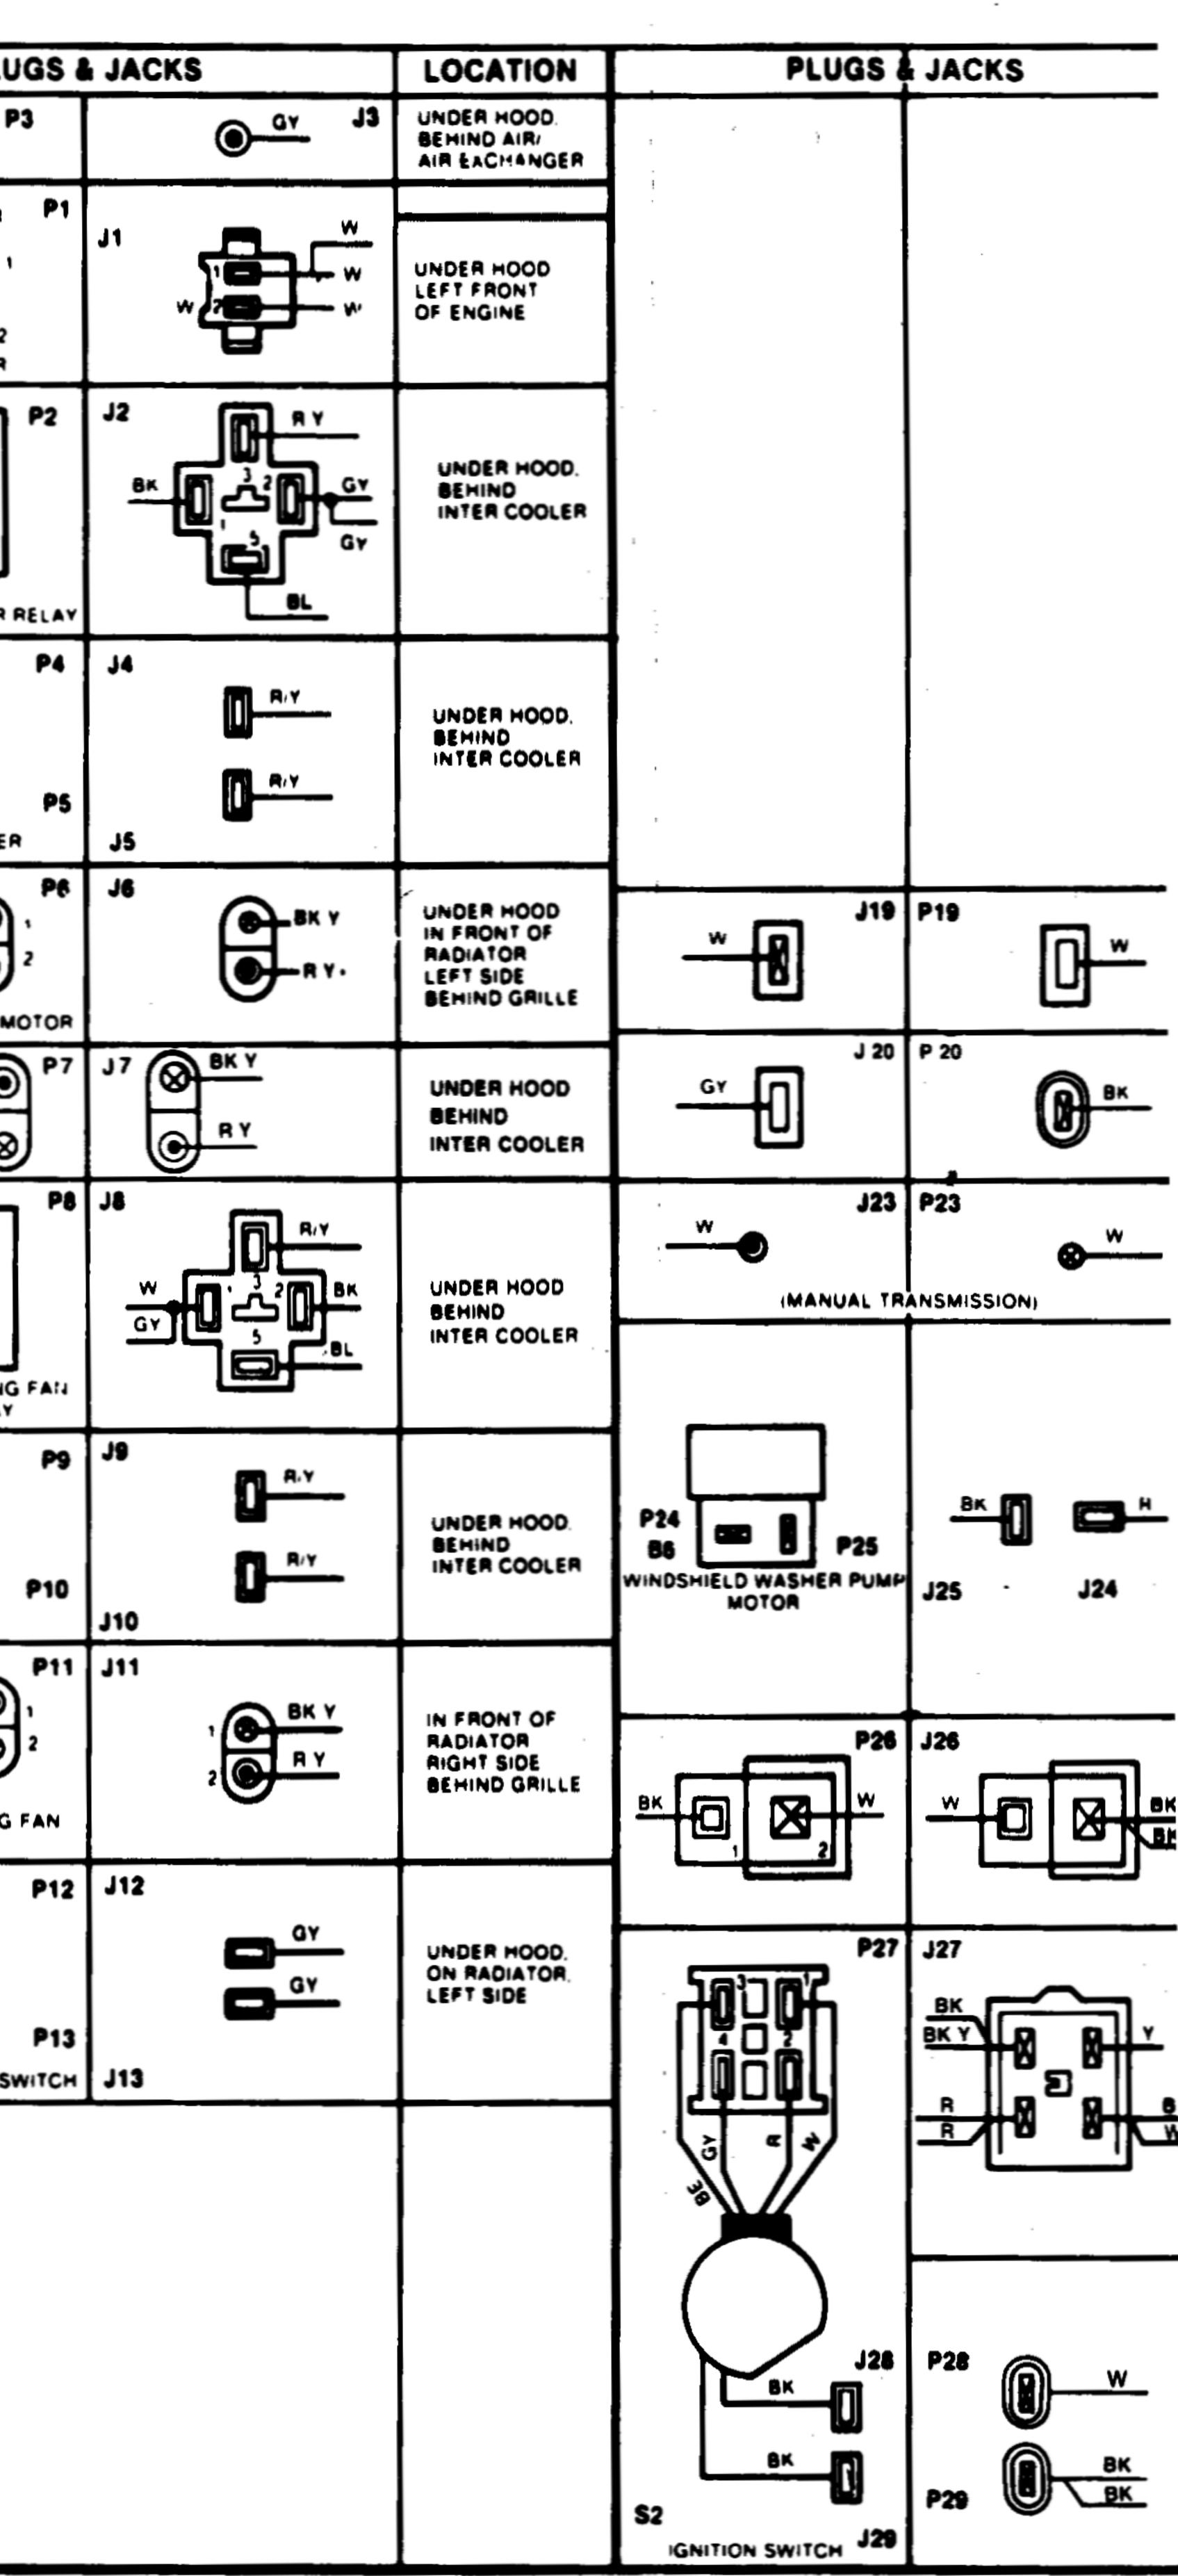


.

-

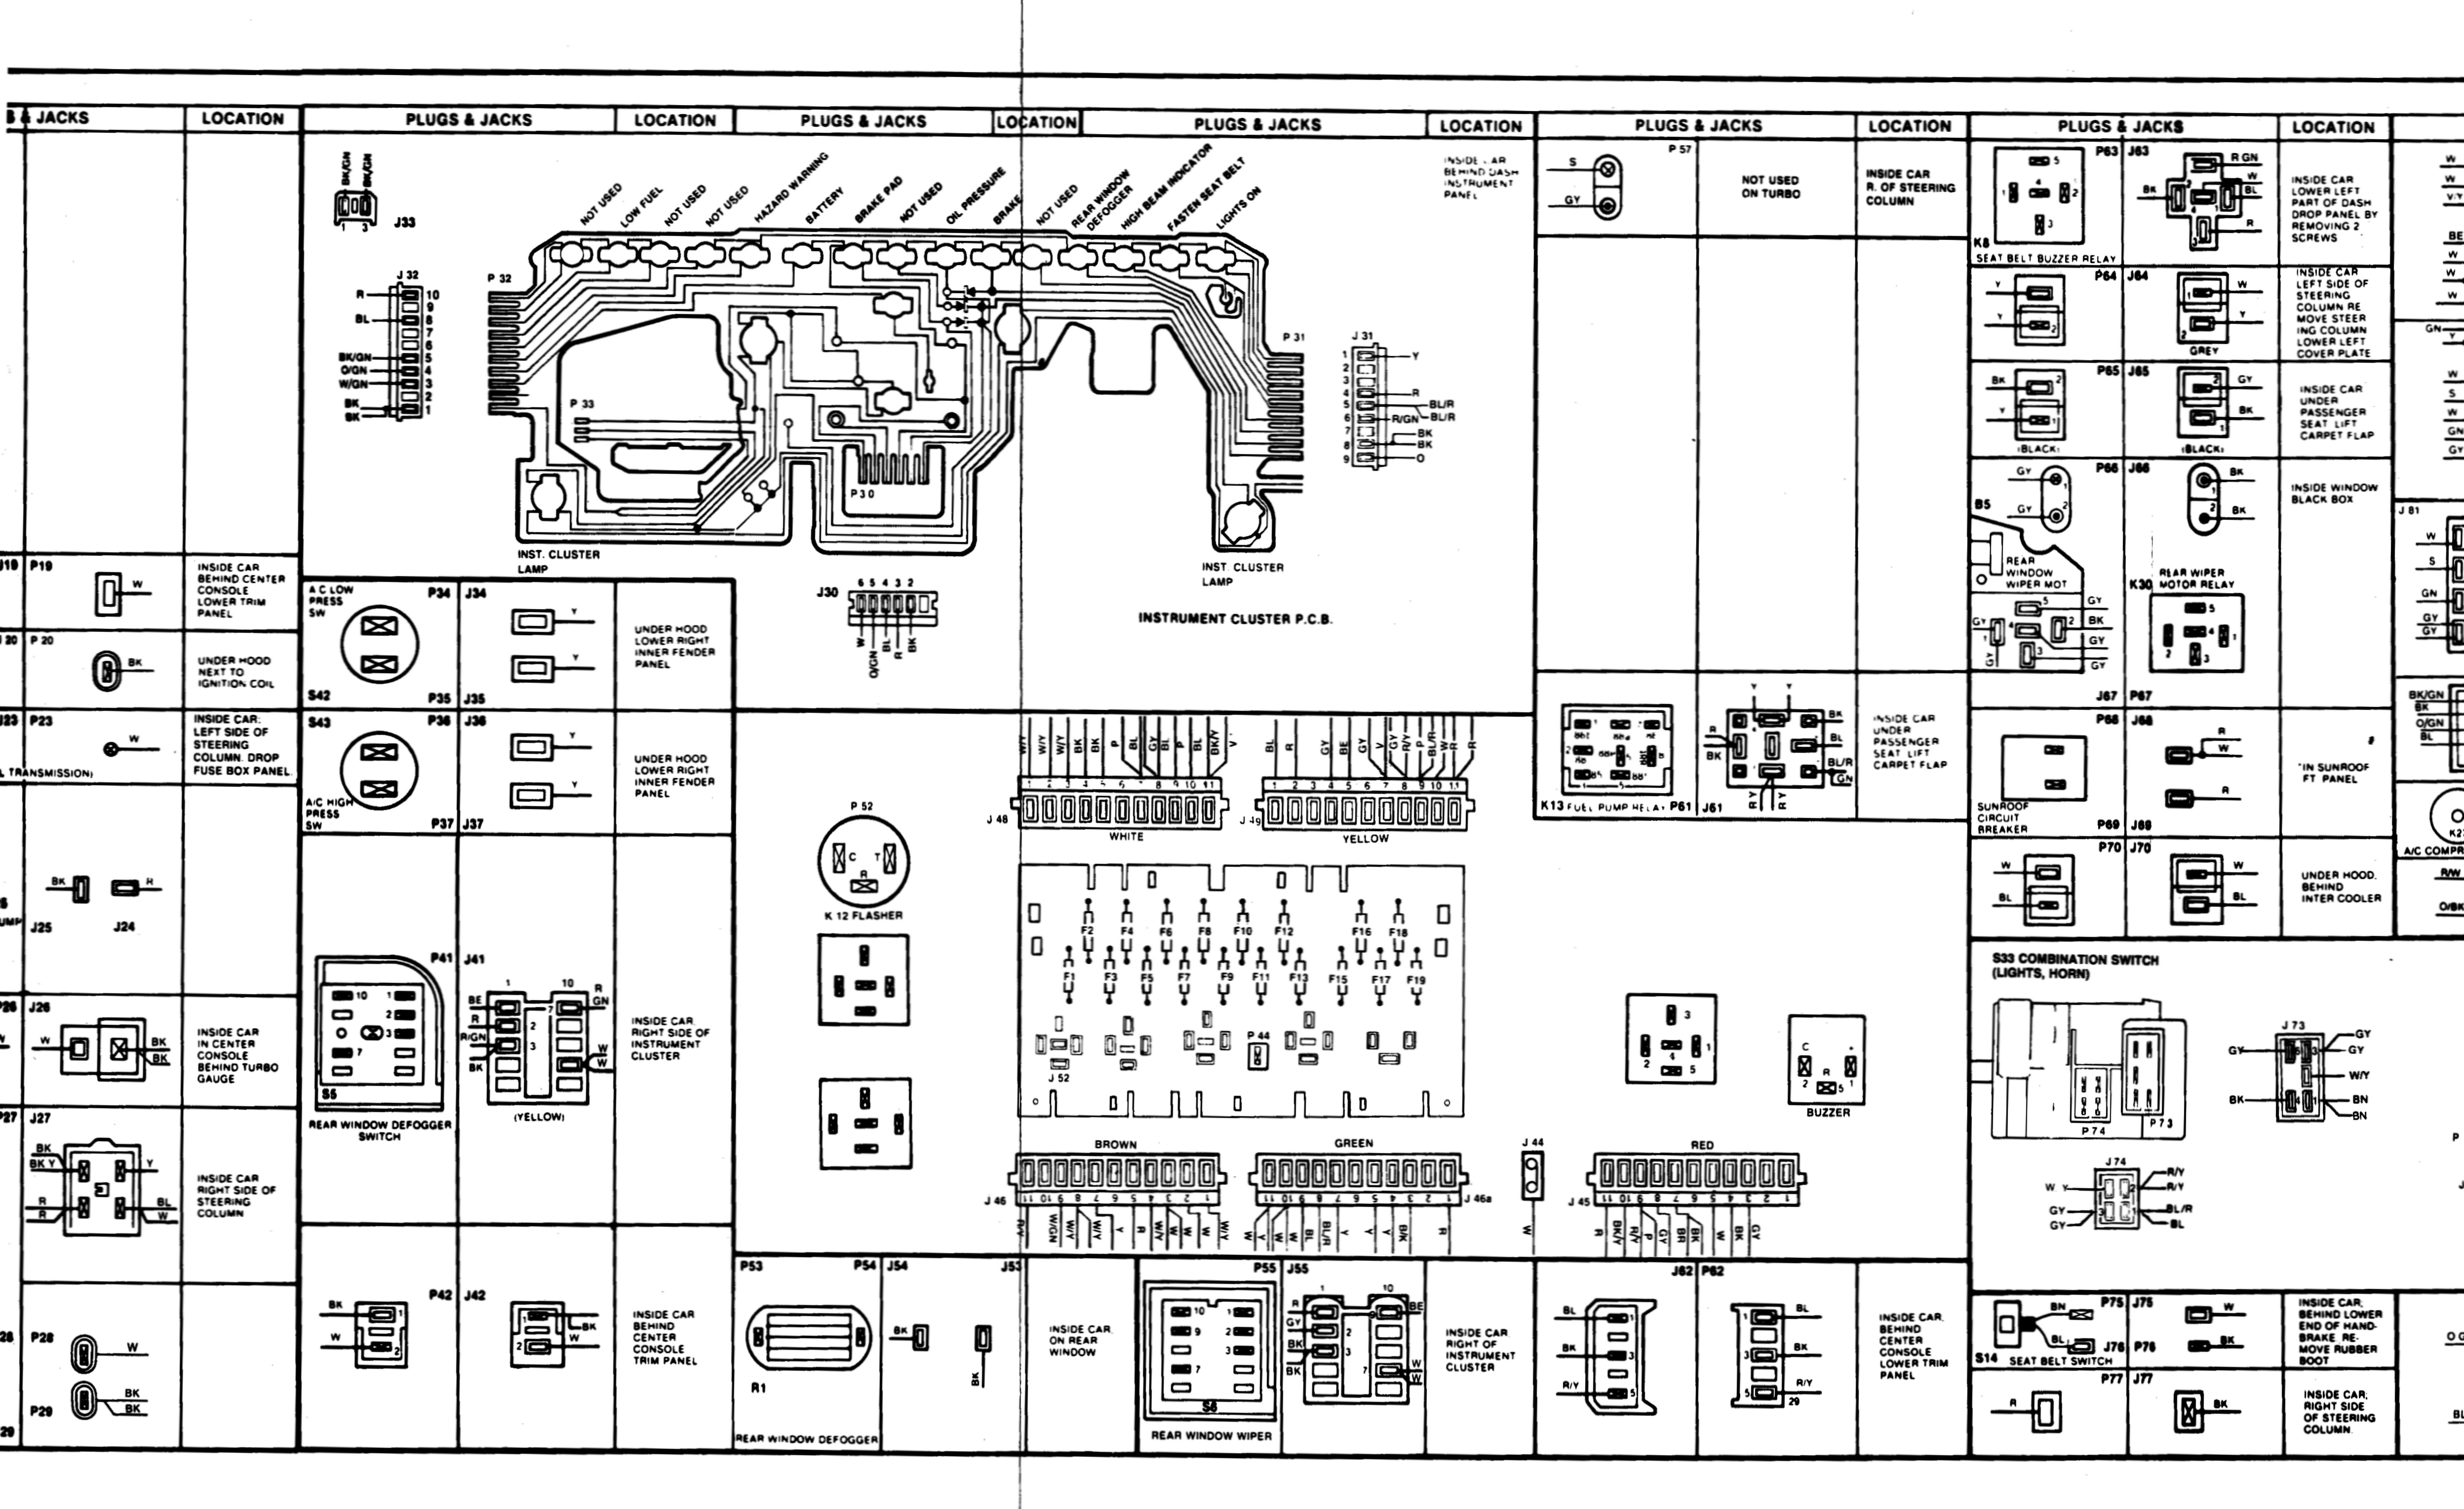


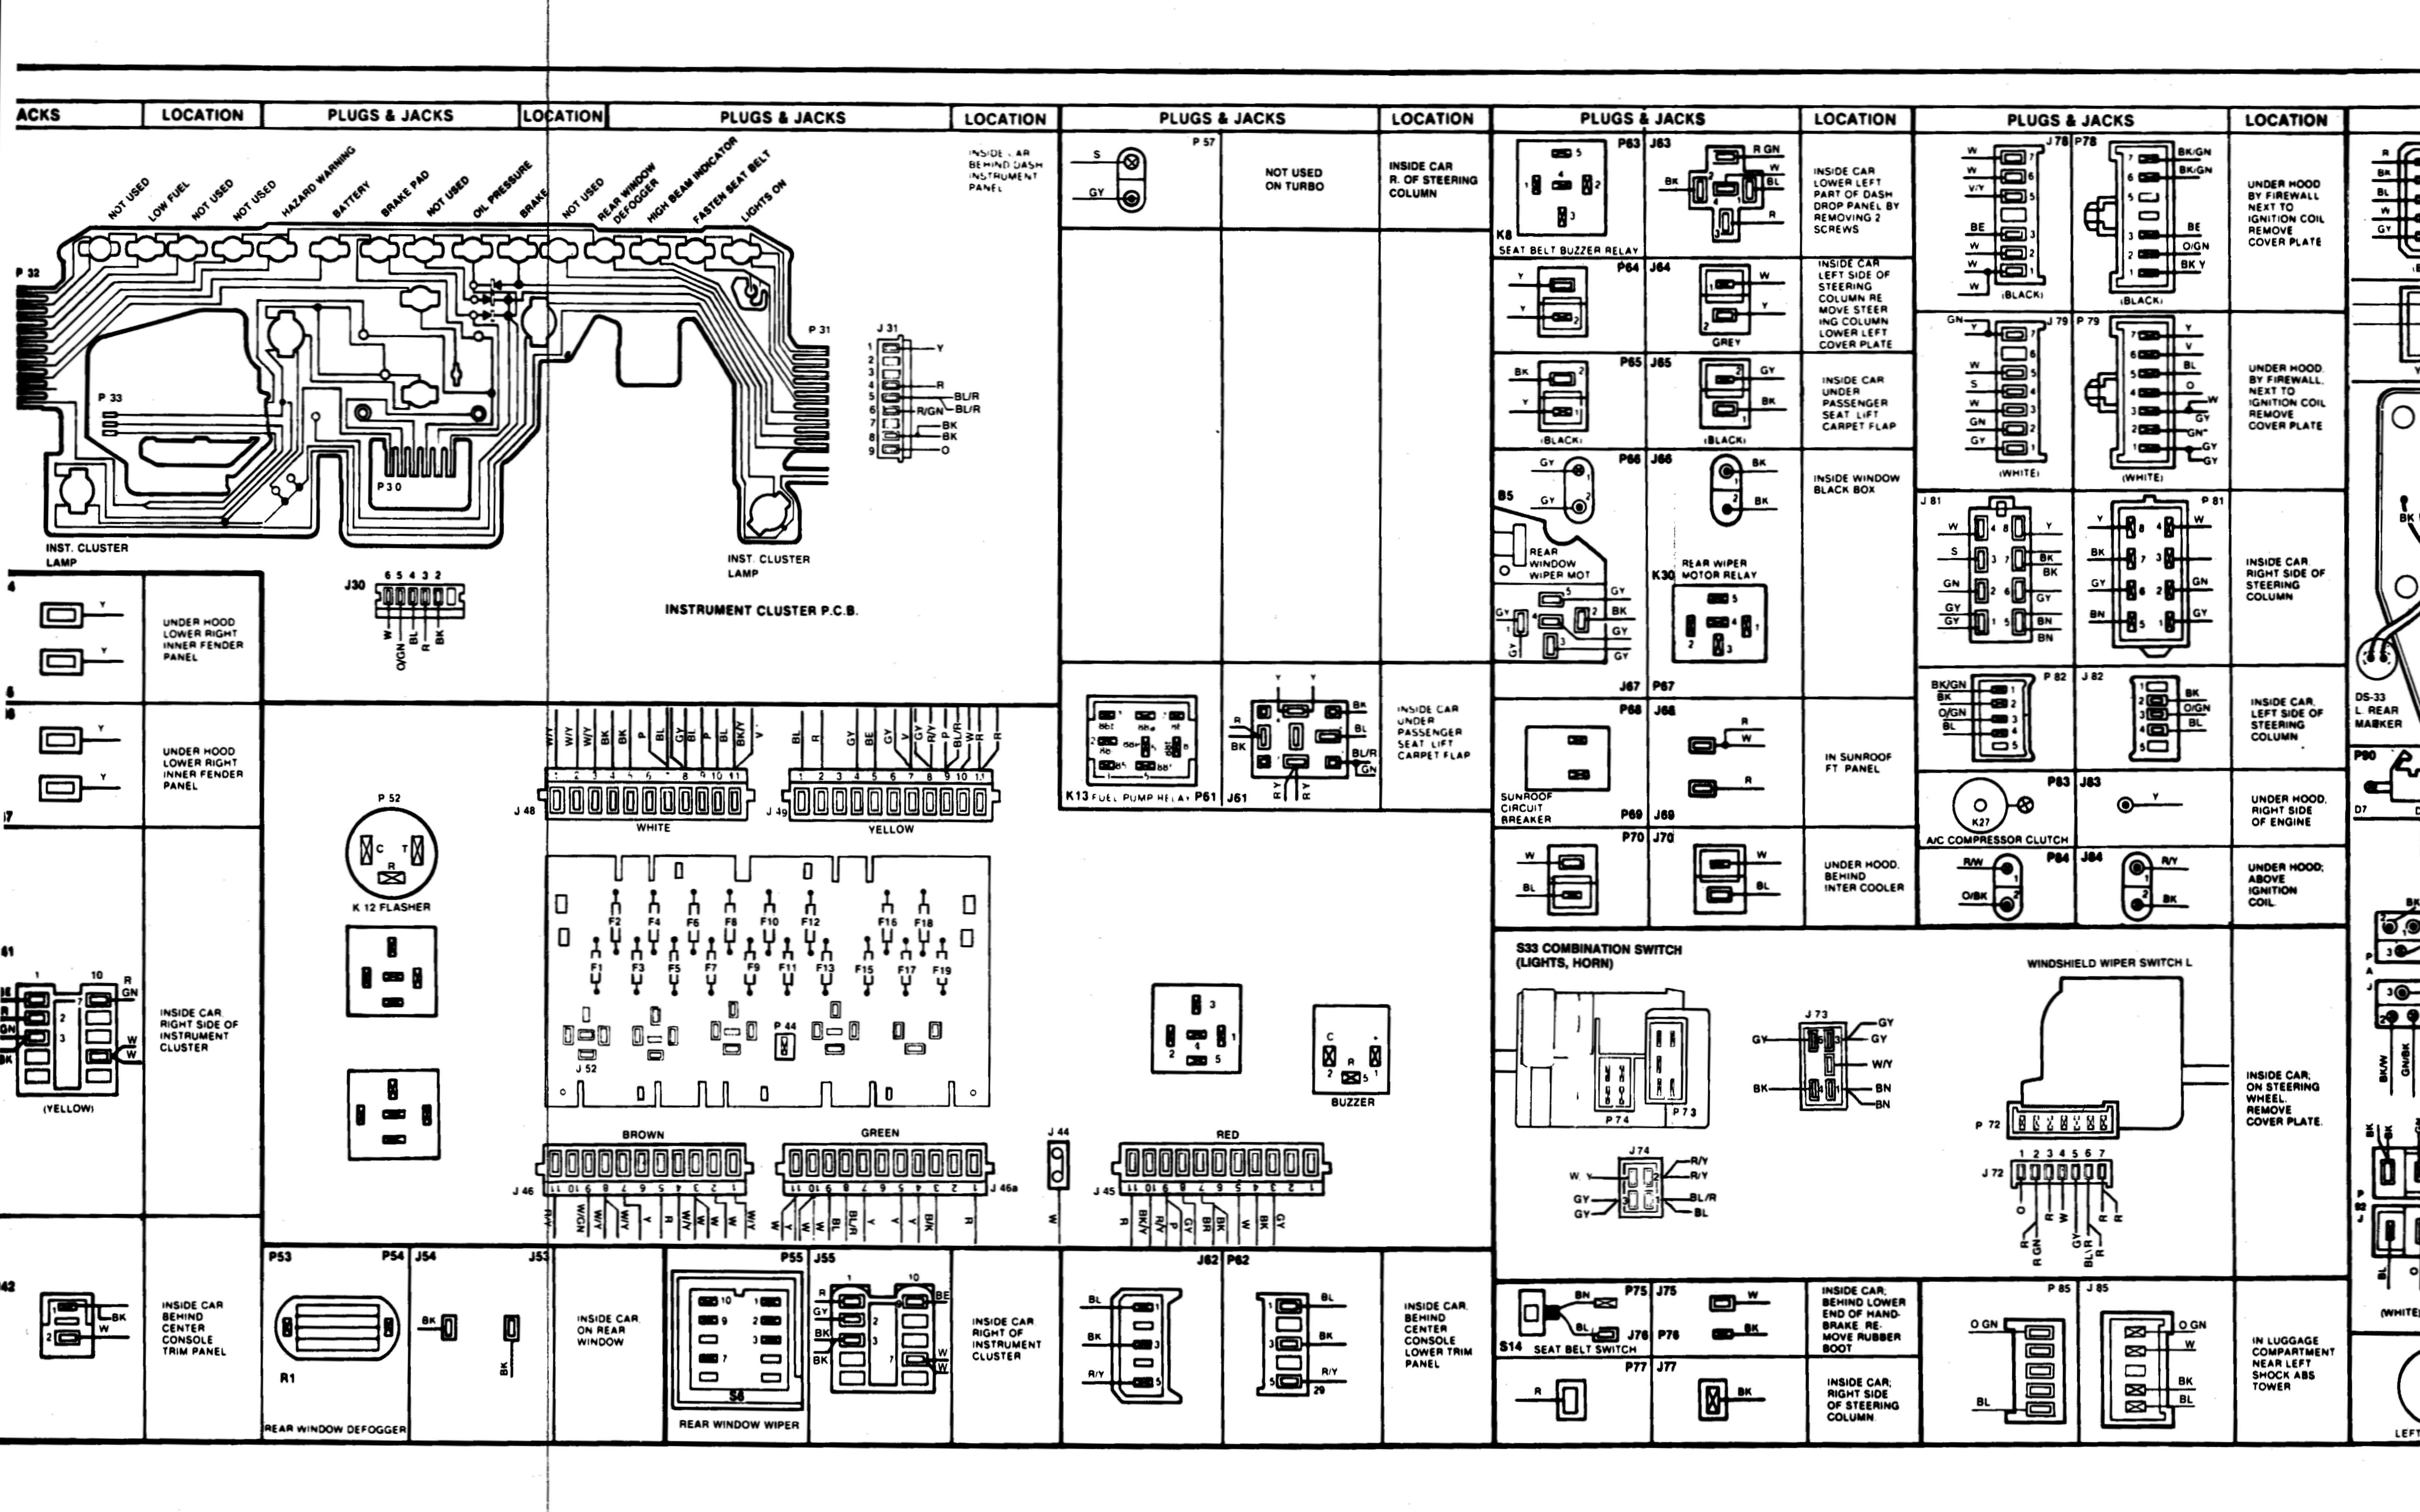

	LOCATION	PLUGS & JACKS	LOCATION	r
BE O/GN	UNDER HOOD BY FIREWALL NEXT TO IGNITION COIL REMOVE COVER PLATE	BLACK) BLACK	UNDER HOOD REAR CENTER: ON WINDSHIELD WIPER MOTOR.	RIG
> > ⇒ o U ^S S S G G	UNDER HOOD, BY FIREWALL, NEXT TO IGNITION COIL REMOVE COVER PLATE	YELLOW YELLOW VELLOW L. TAIL LAMP ASSY. J888 P888	INSIDE CAR, LEFT SIDE OF STEERING COLUMN INSIDE TRUNK LEFT REAR REMOVE COVER PLATE	
P 81 W GN	INSIDE CAR RIGHT SIDE OF STEERING COLUMN			DS R. LA
BK GN D/G BL	INSIDE CAR, LEFT SIDE OF STEERING COLUMN	DS-33 L. REAR MARKER POO C POO JOO JOO JOO JOO	INSIDE CAR	· S4
	UNDER HOOD, RIGHT SIDE OF ENGINE		CONSOLE REMOVE RADIO	P10
	UNDER HOOD; ABOVE IGNITION COIL		INSIDE CAR, BEHIND RADIO REMOVE RADIO	59
	INSIDE CAR; ON STEERING WHEEL. REMOVE COVER PLATE			S10 S11 LEF S12 RIG
) GN				R2 COC
¥ <u>×</u>	IN LUGGAGE COMPARTMENT NEAR LEFT SHOCK ABS TOWER	LEFTF. SPEAKER	IN LEFT DOOR	R3.1

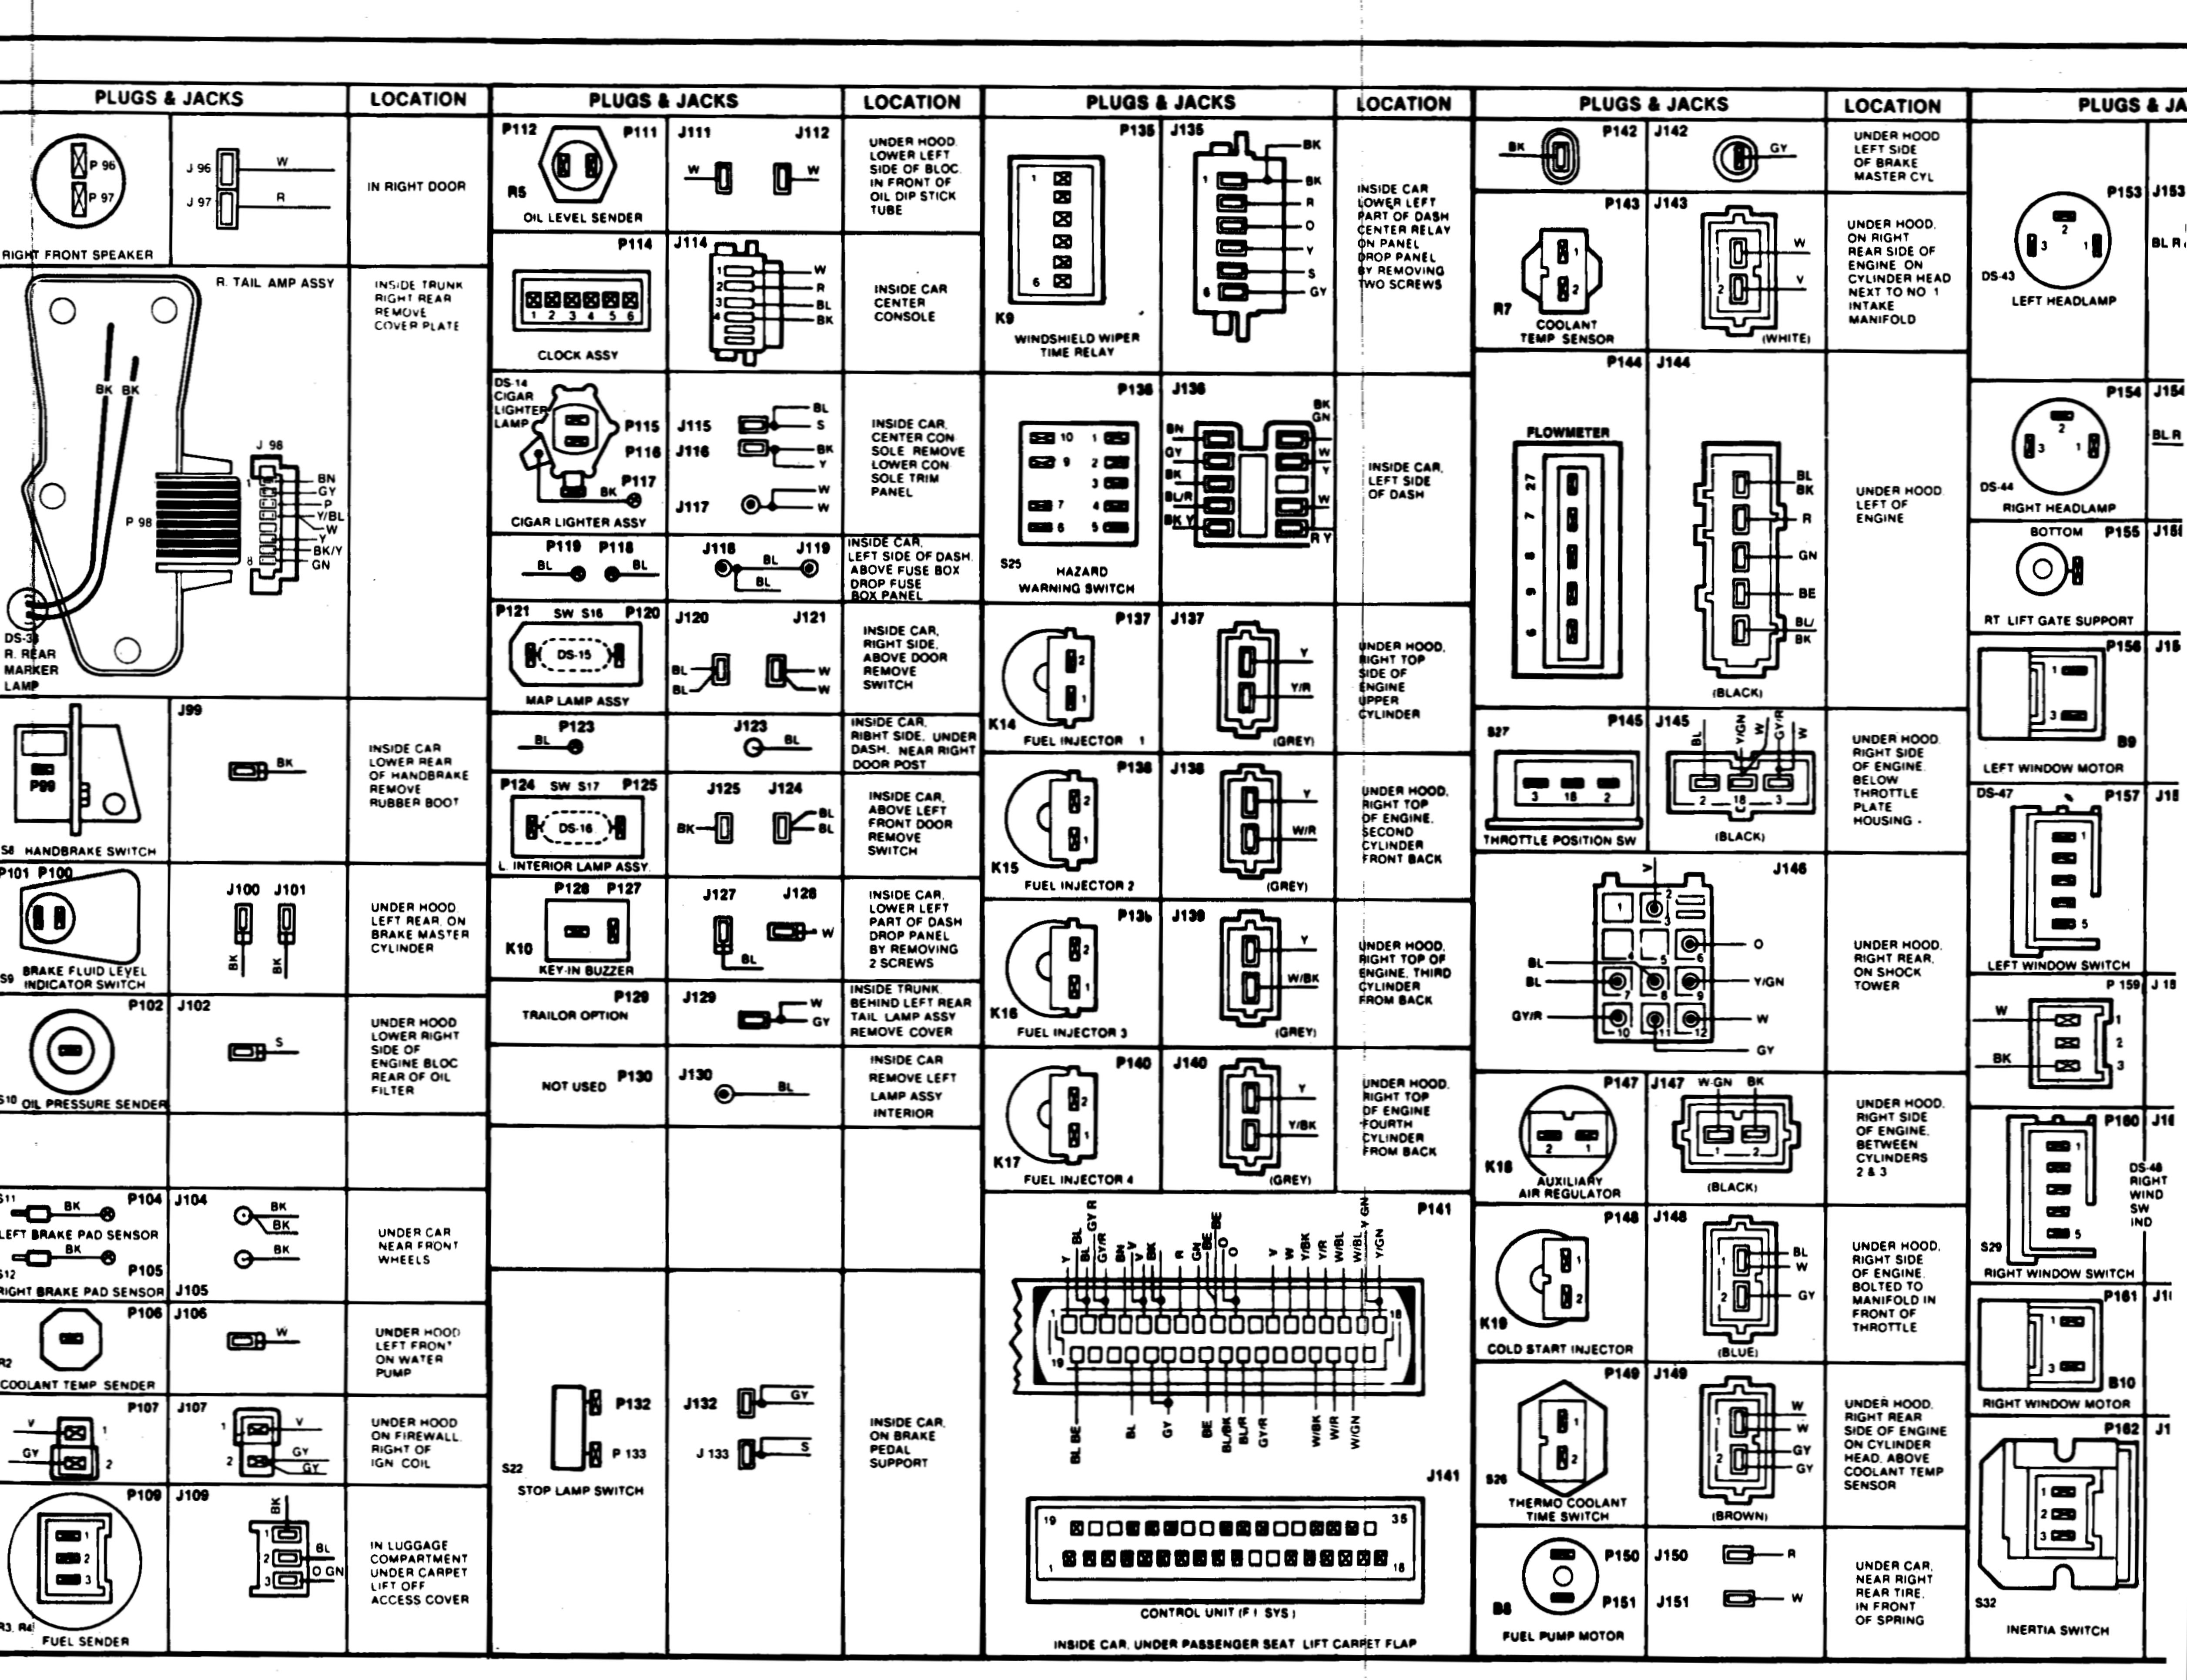



-

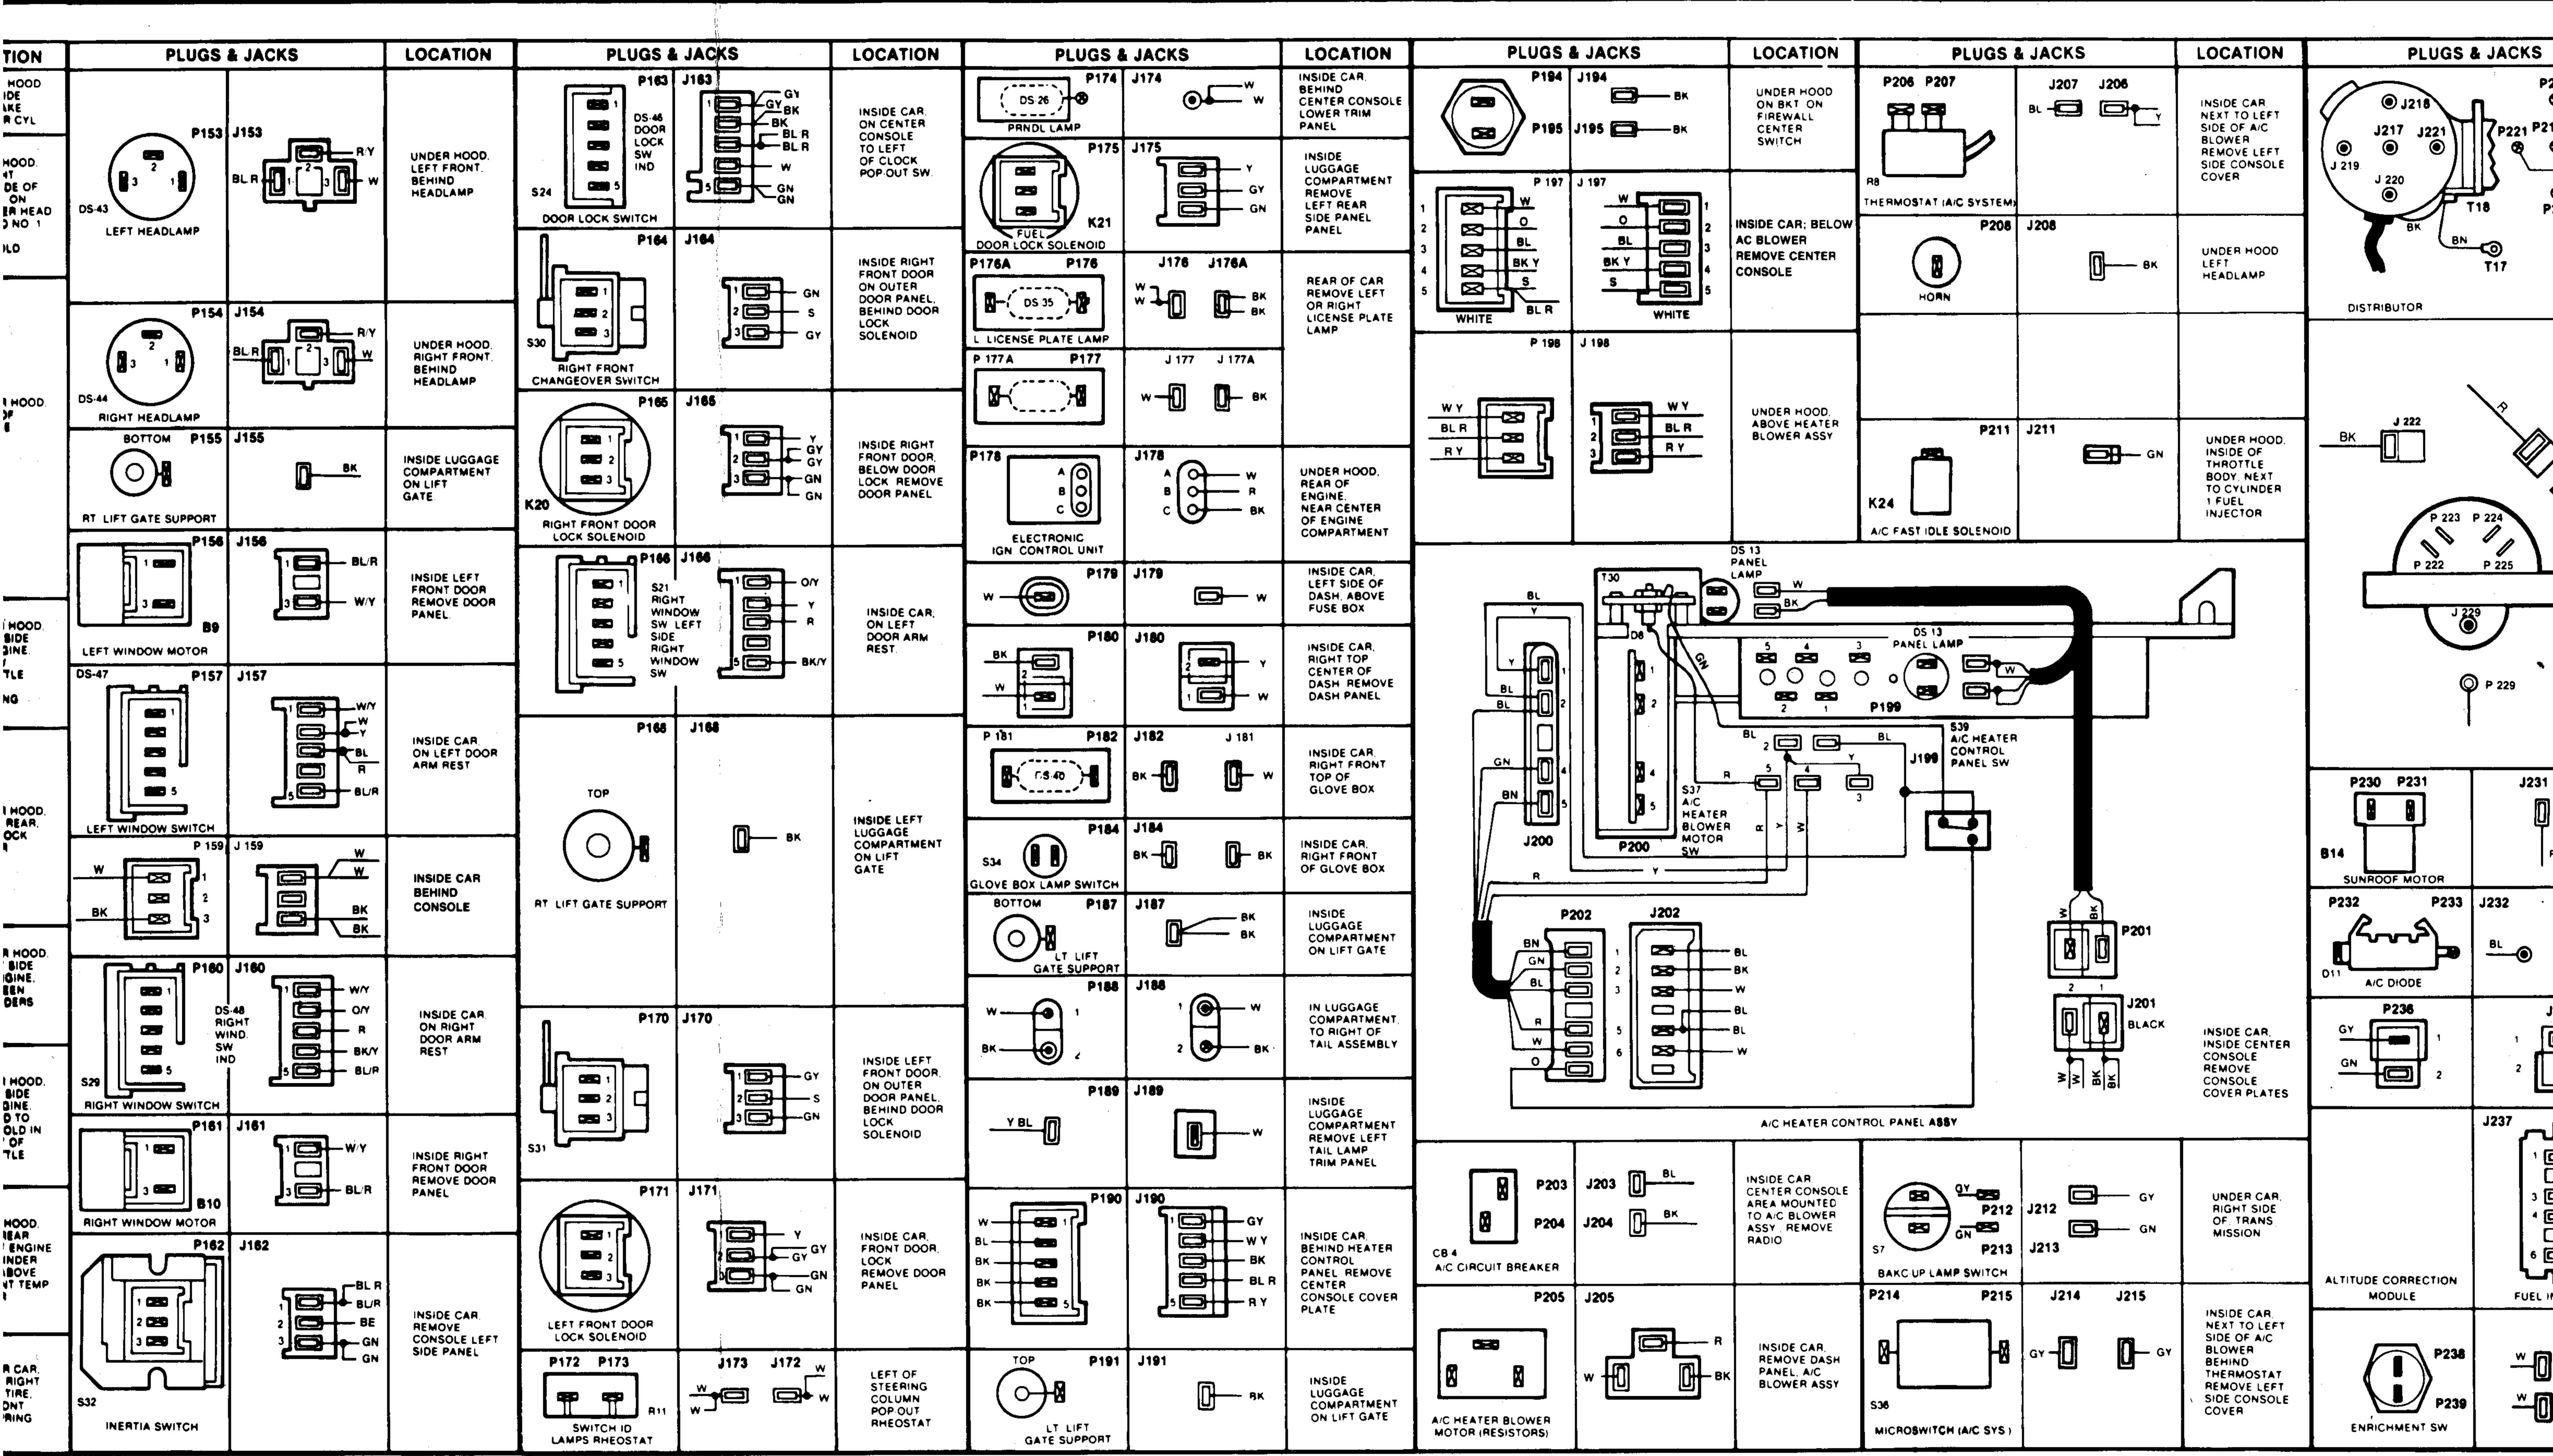



•




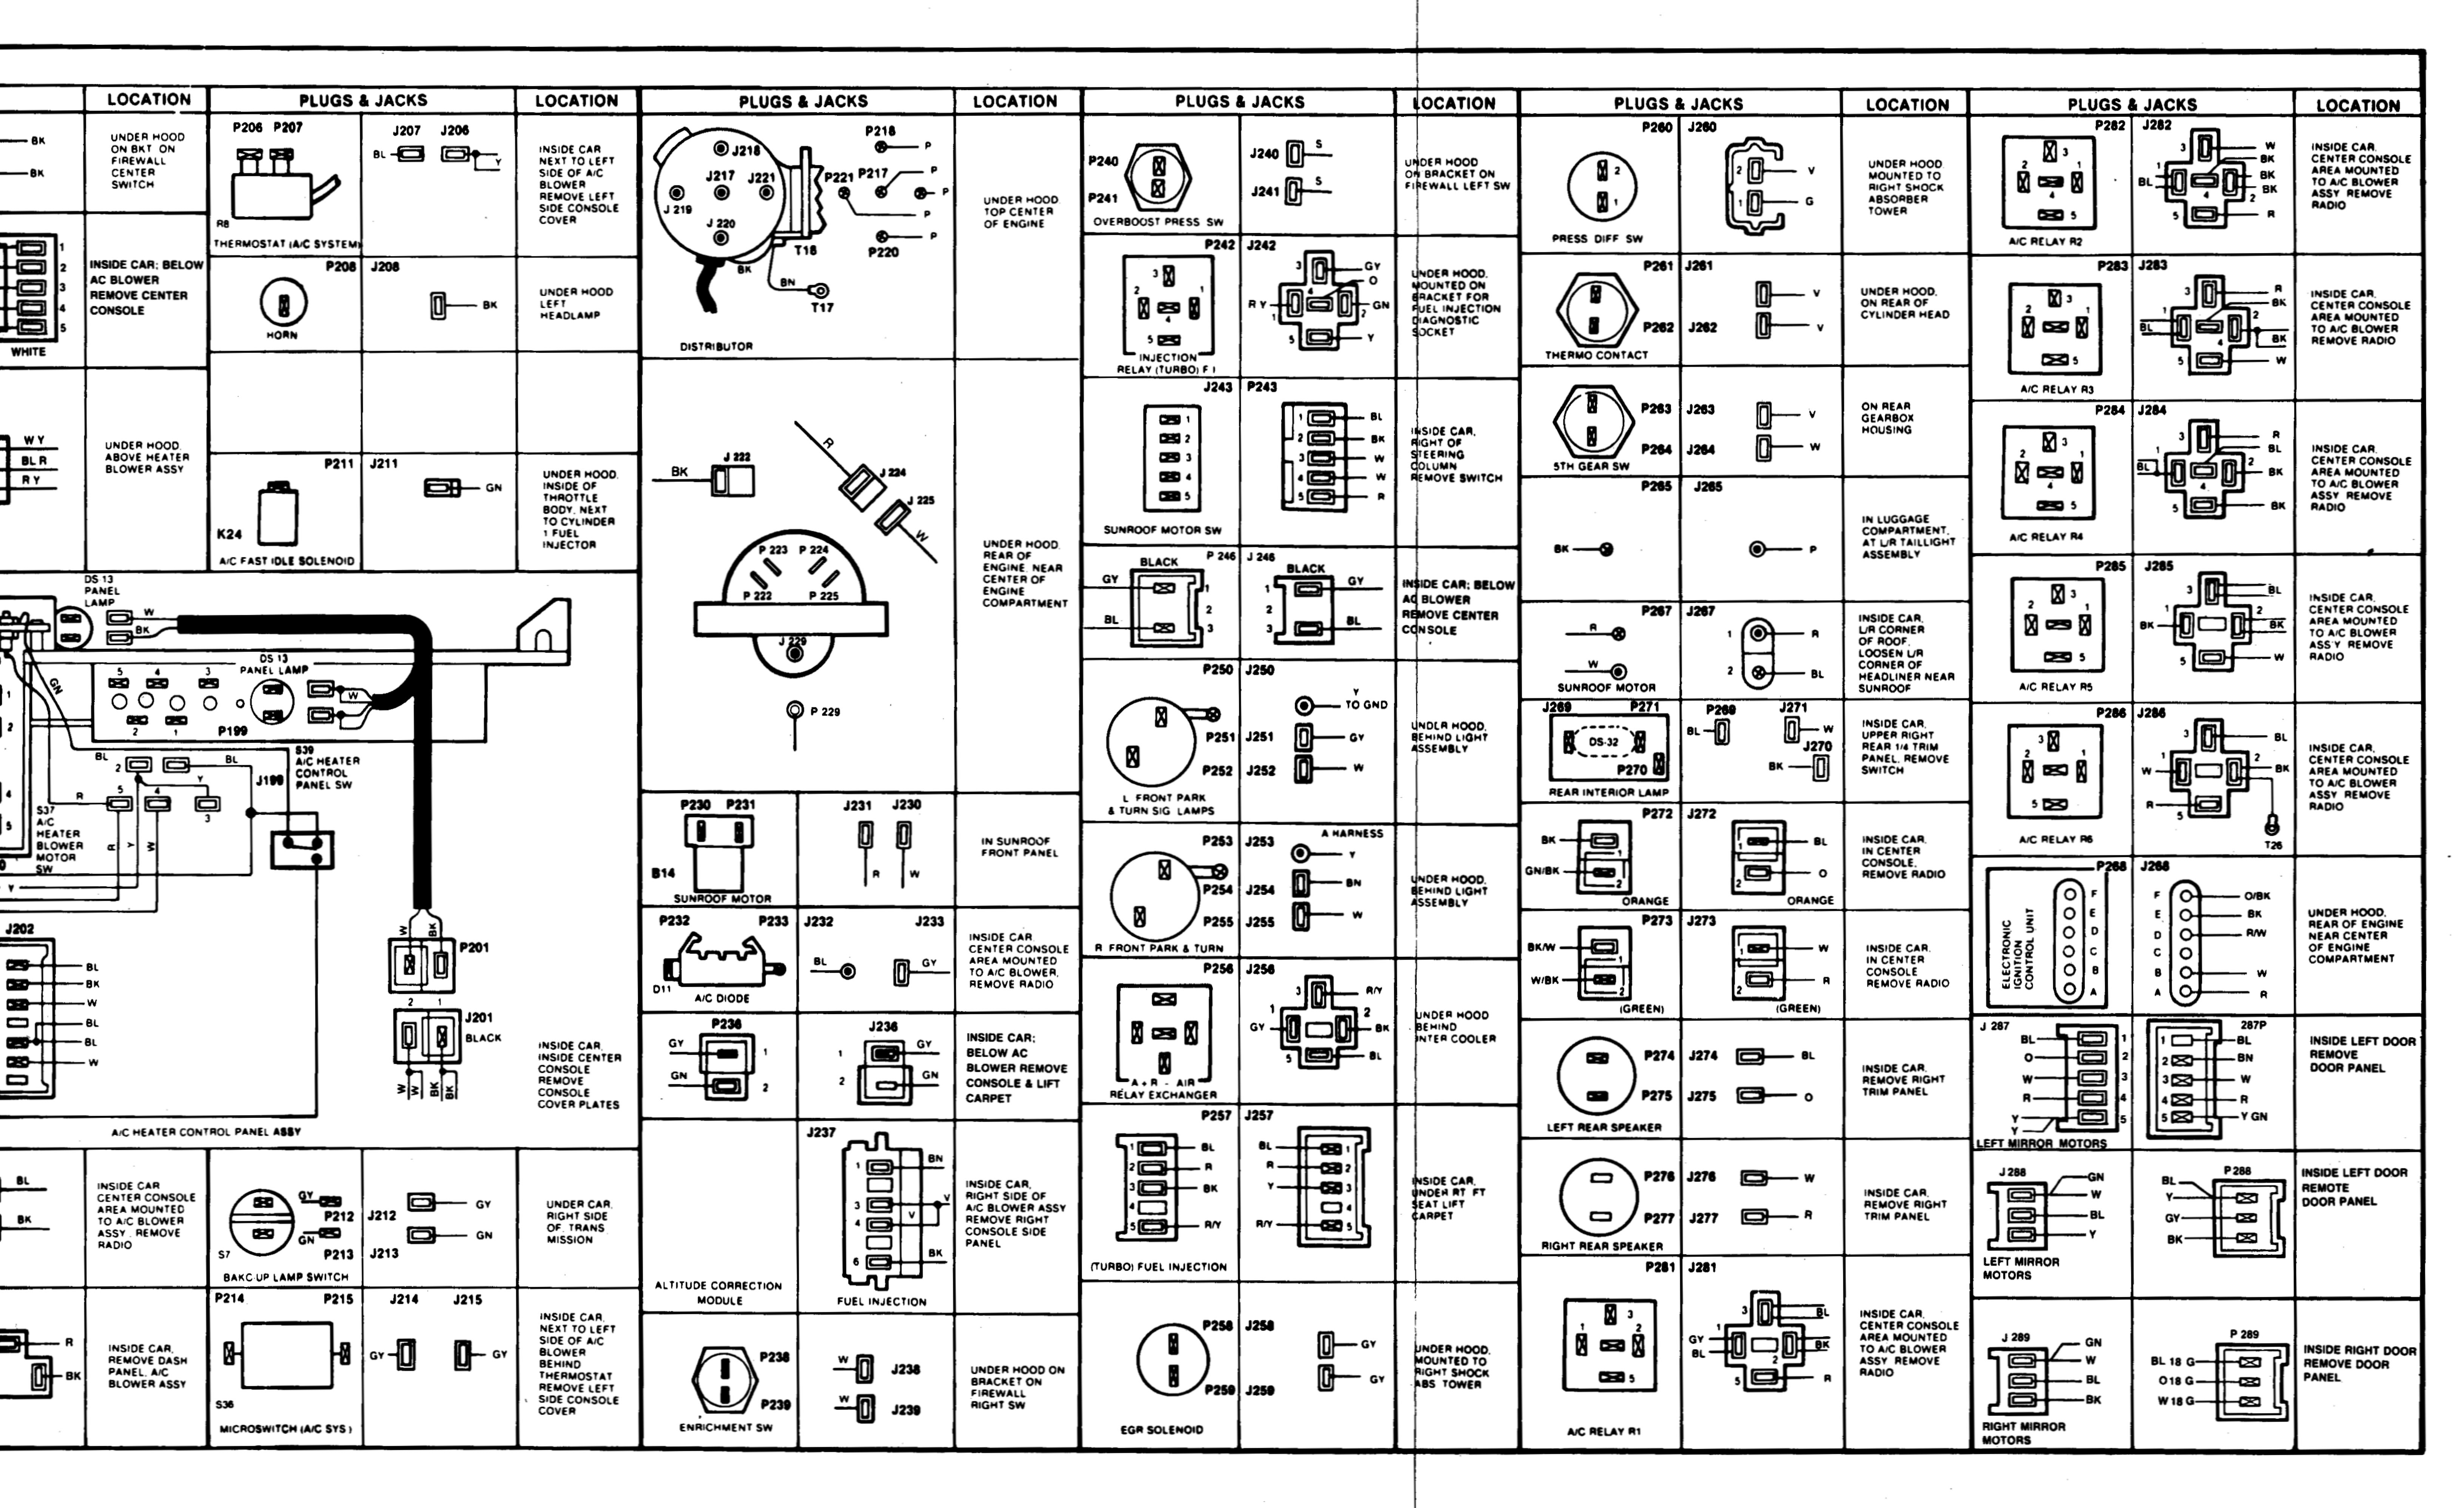


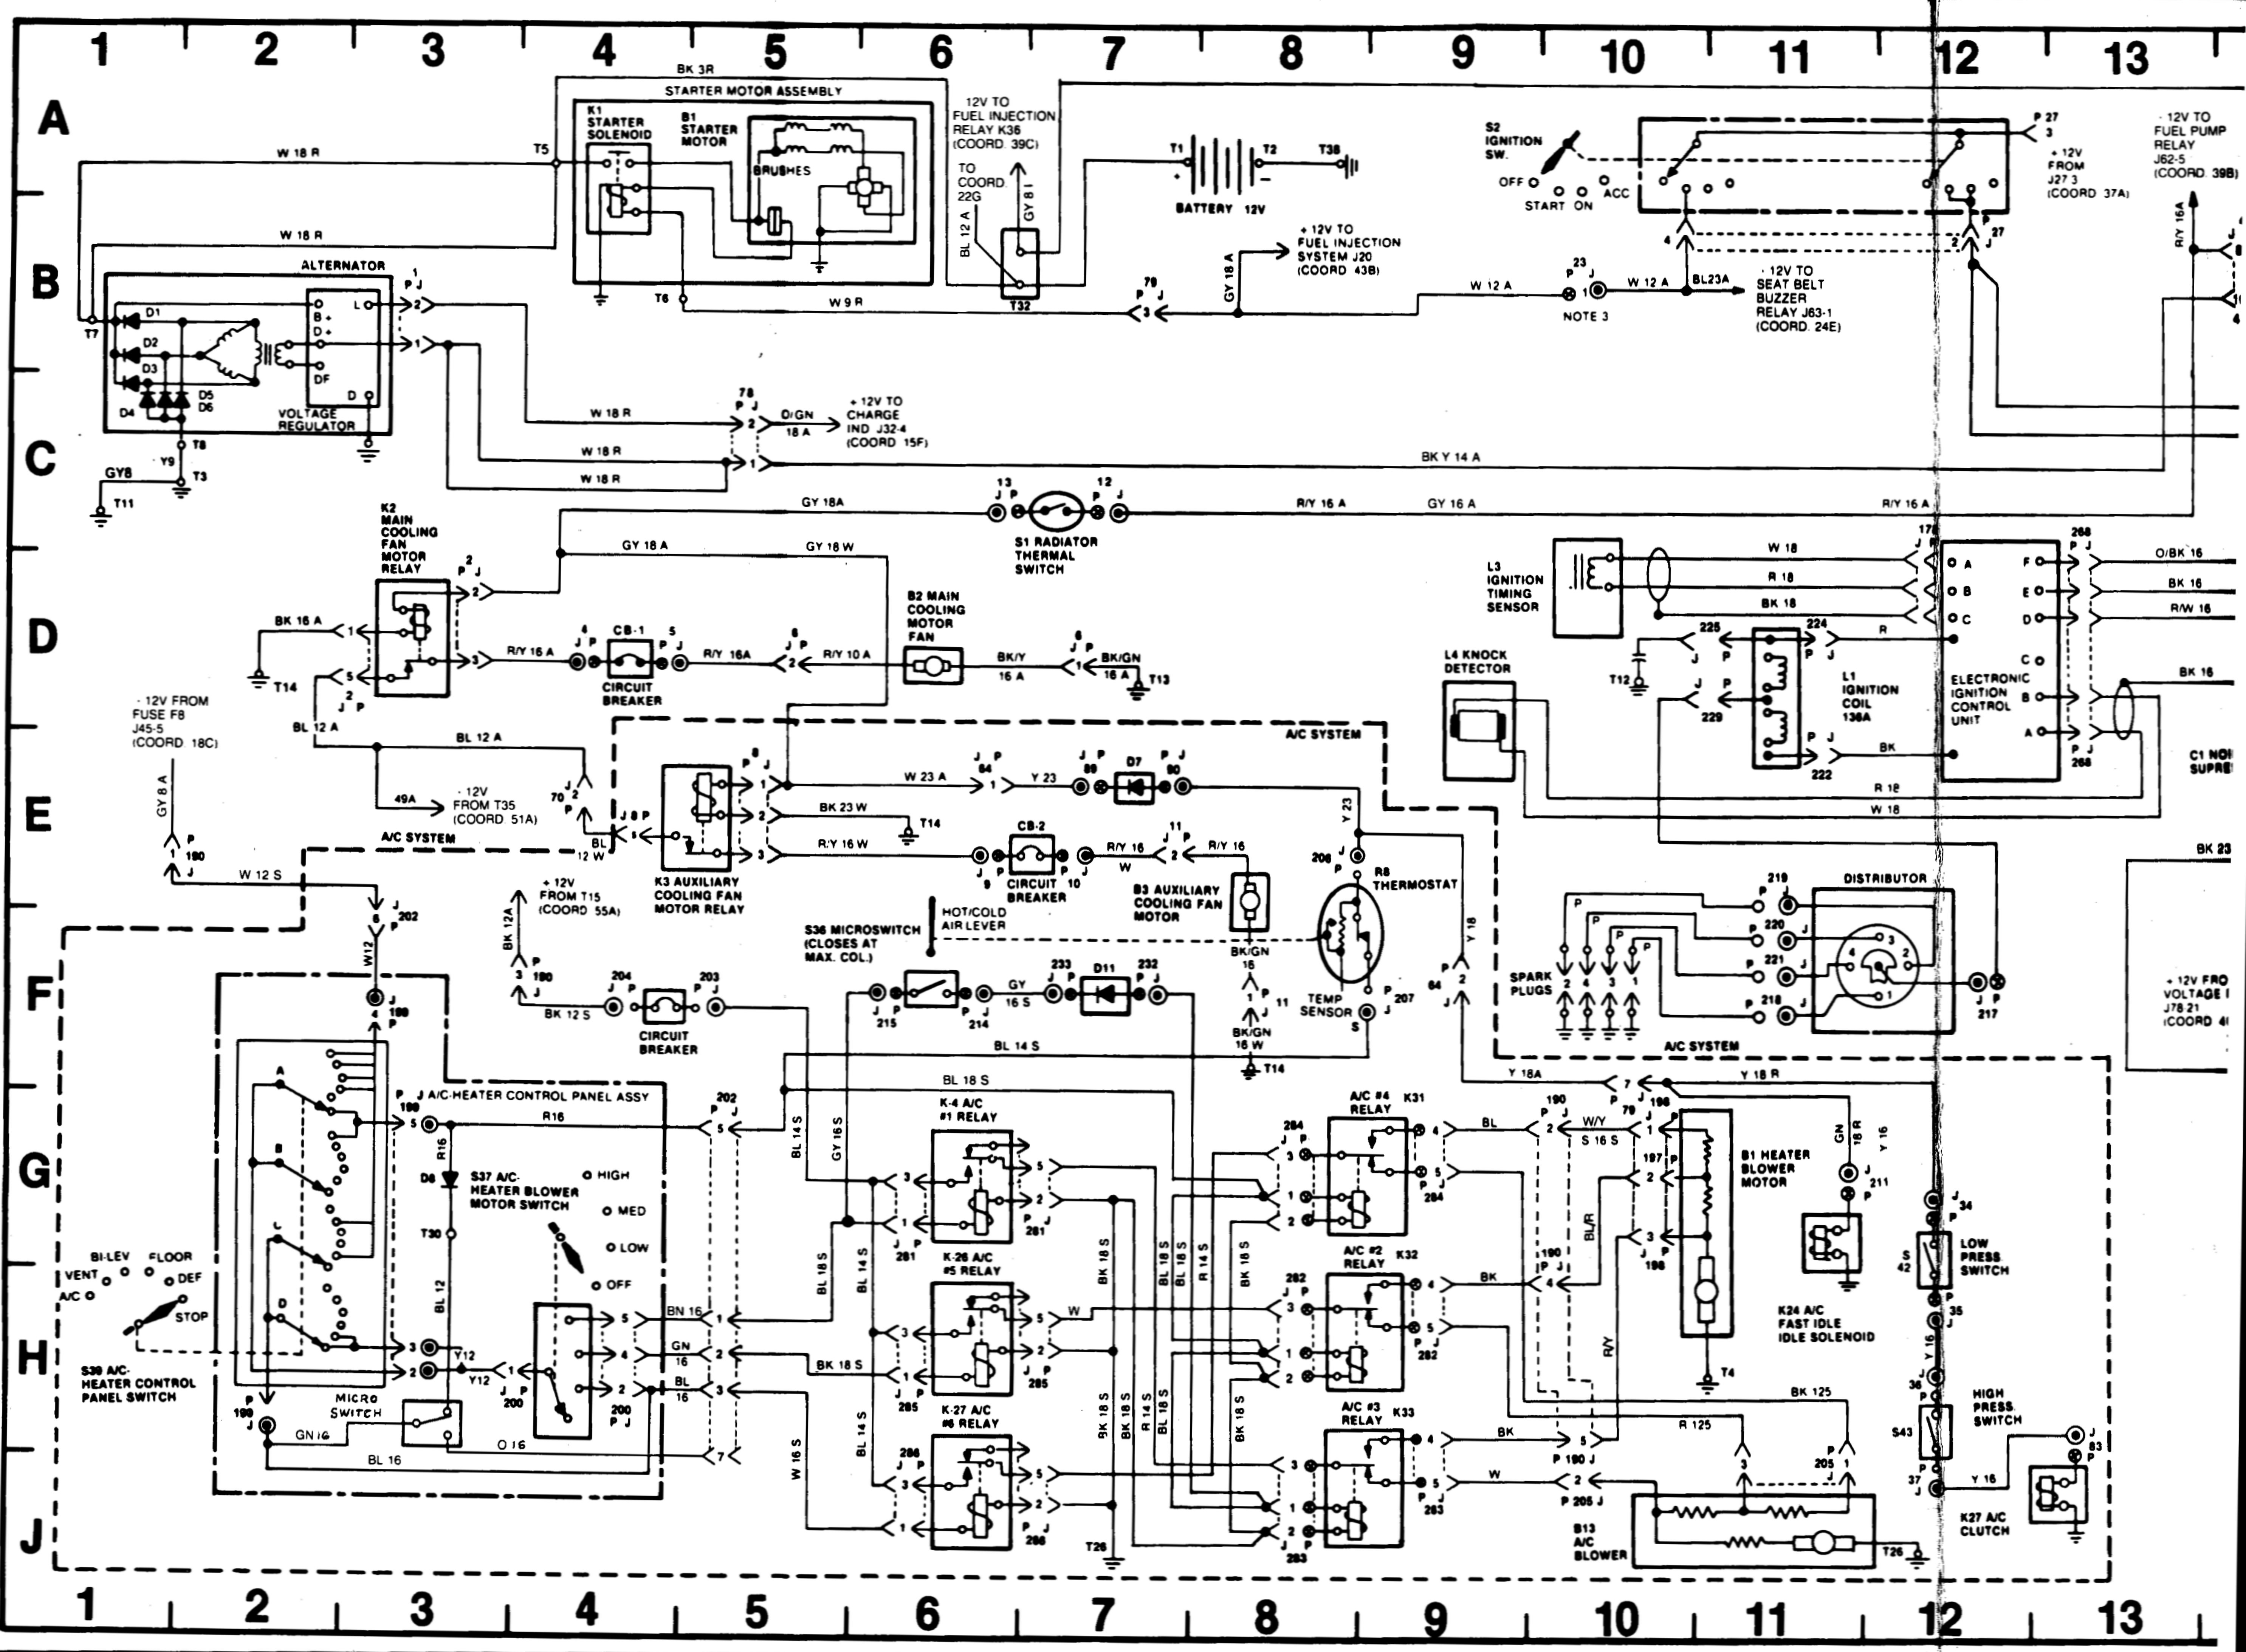

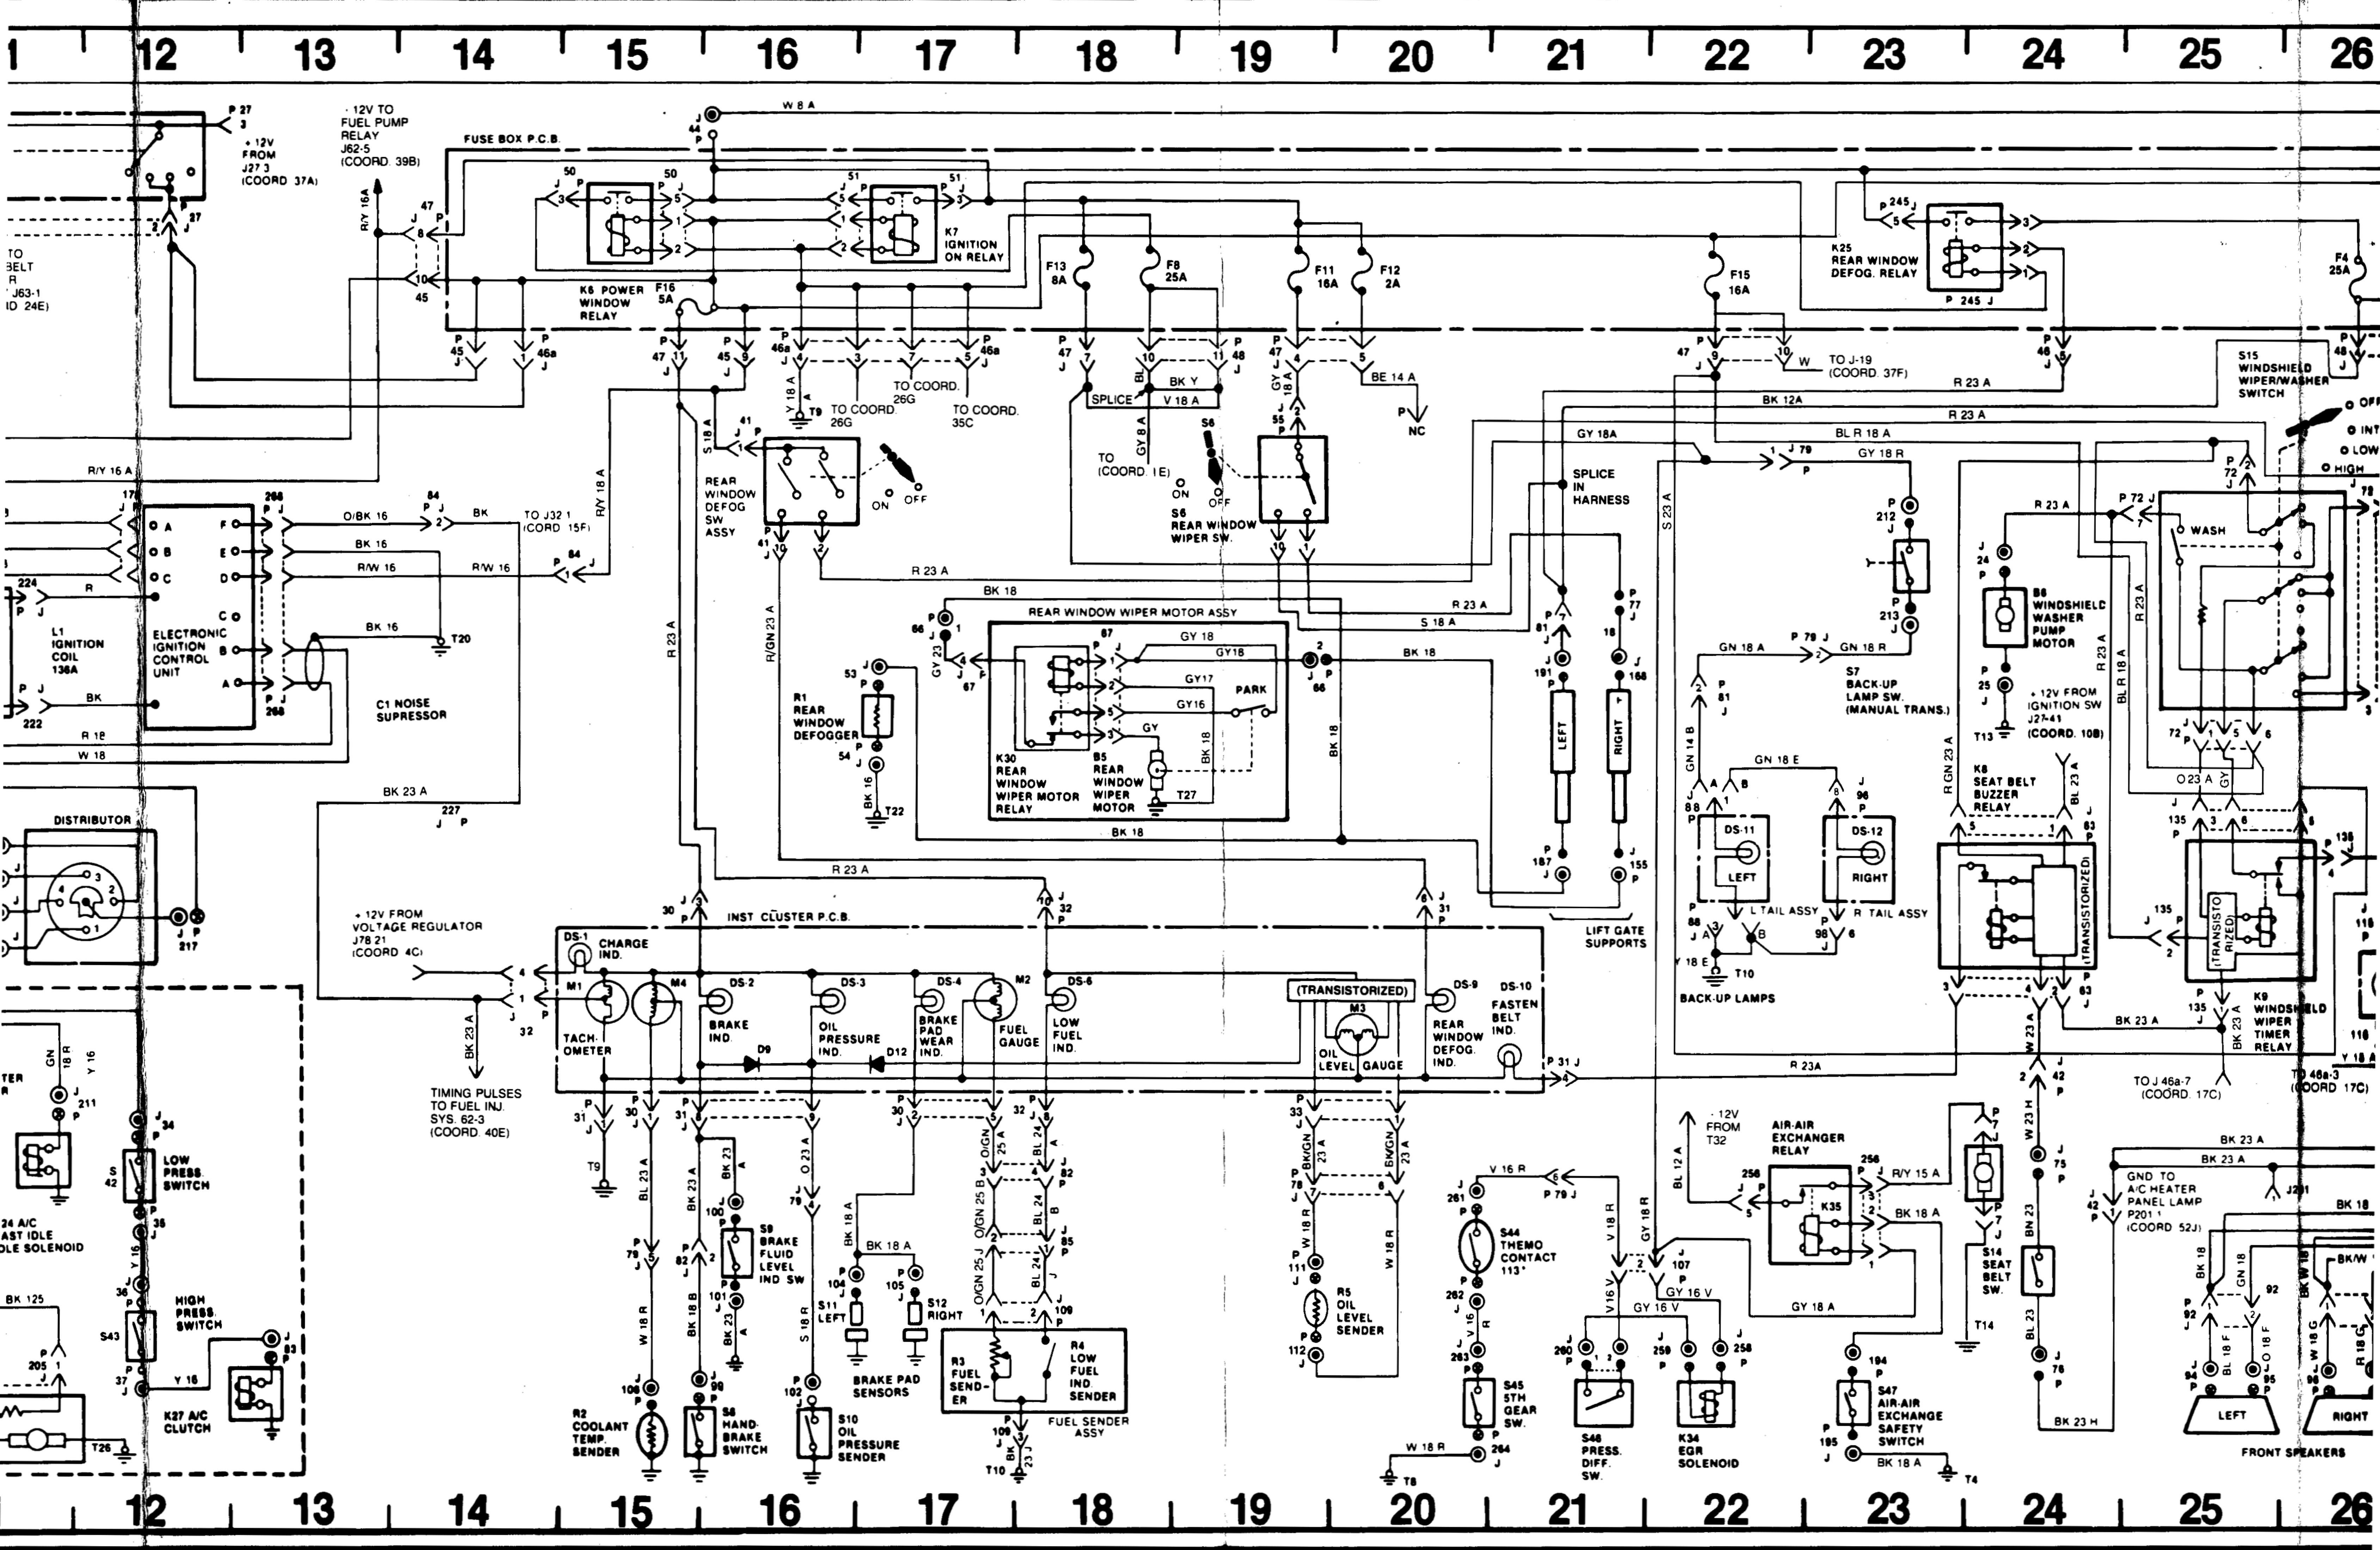

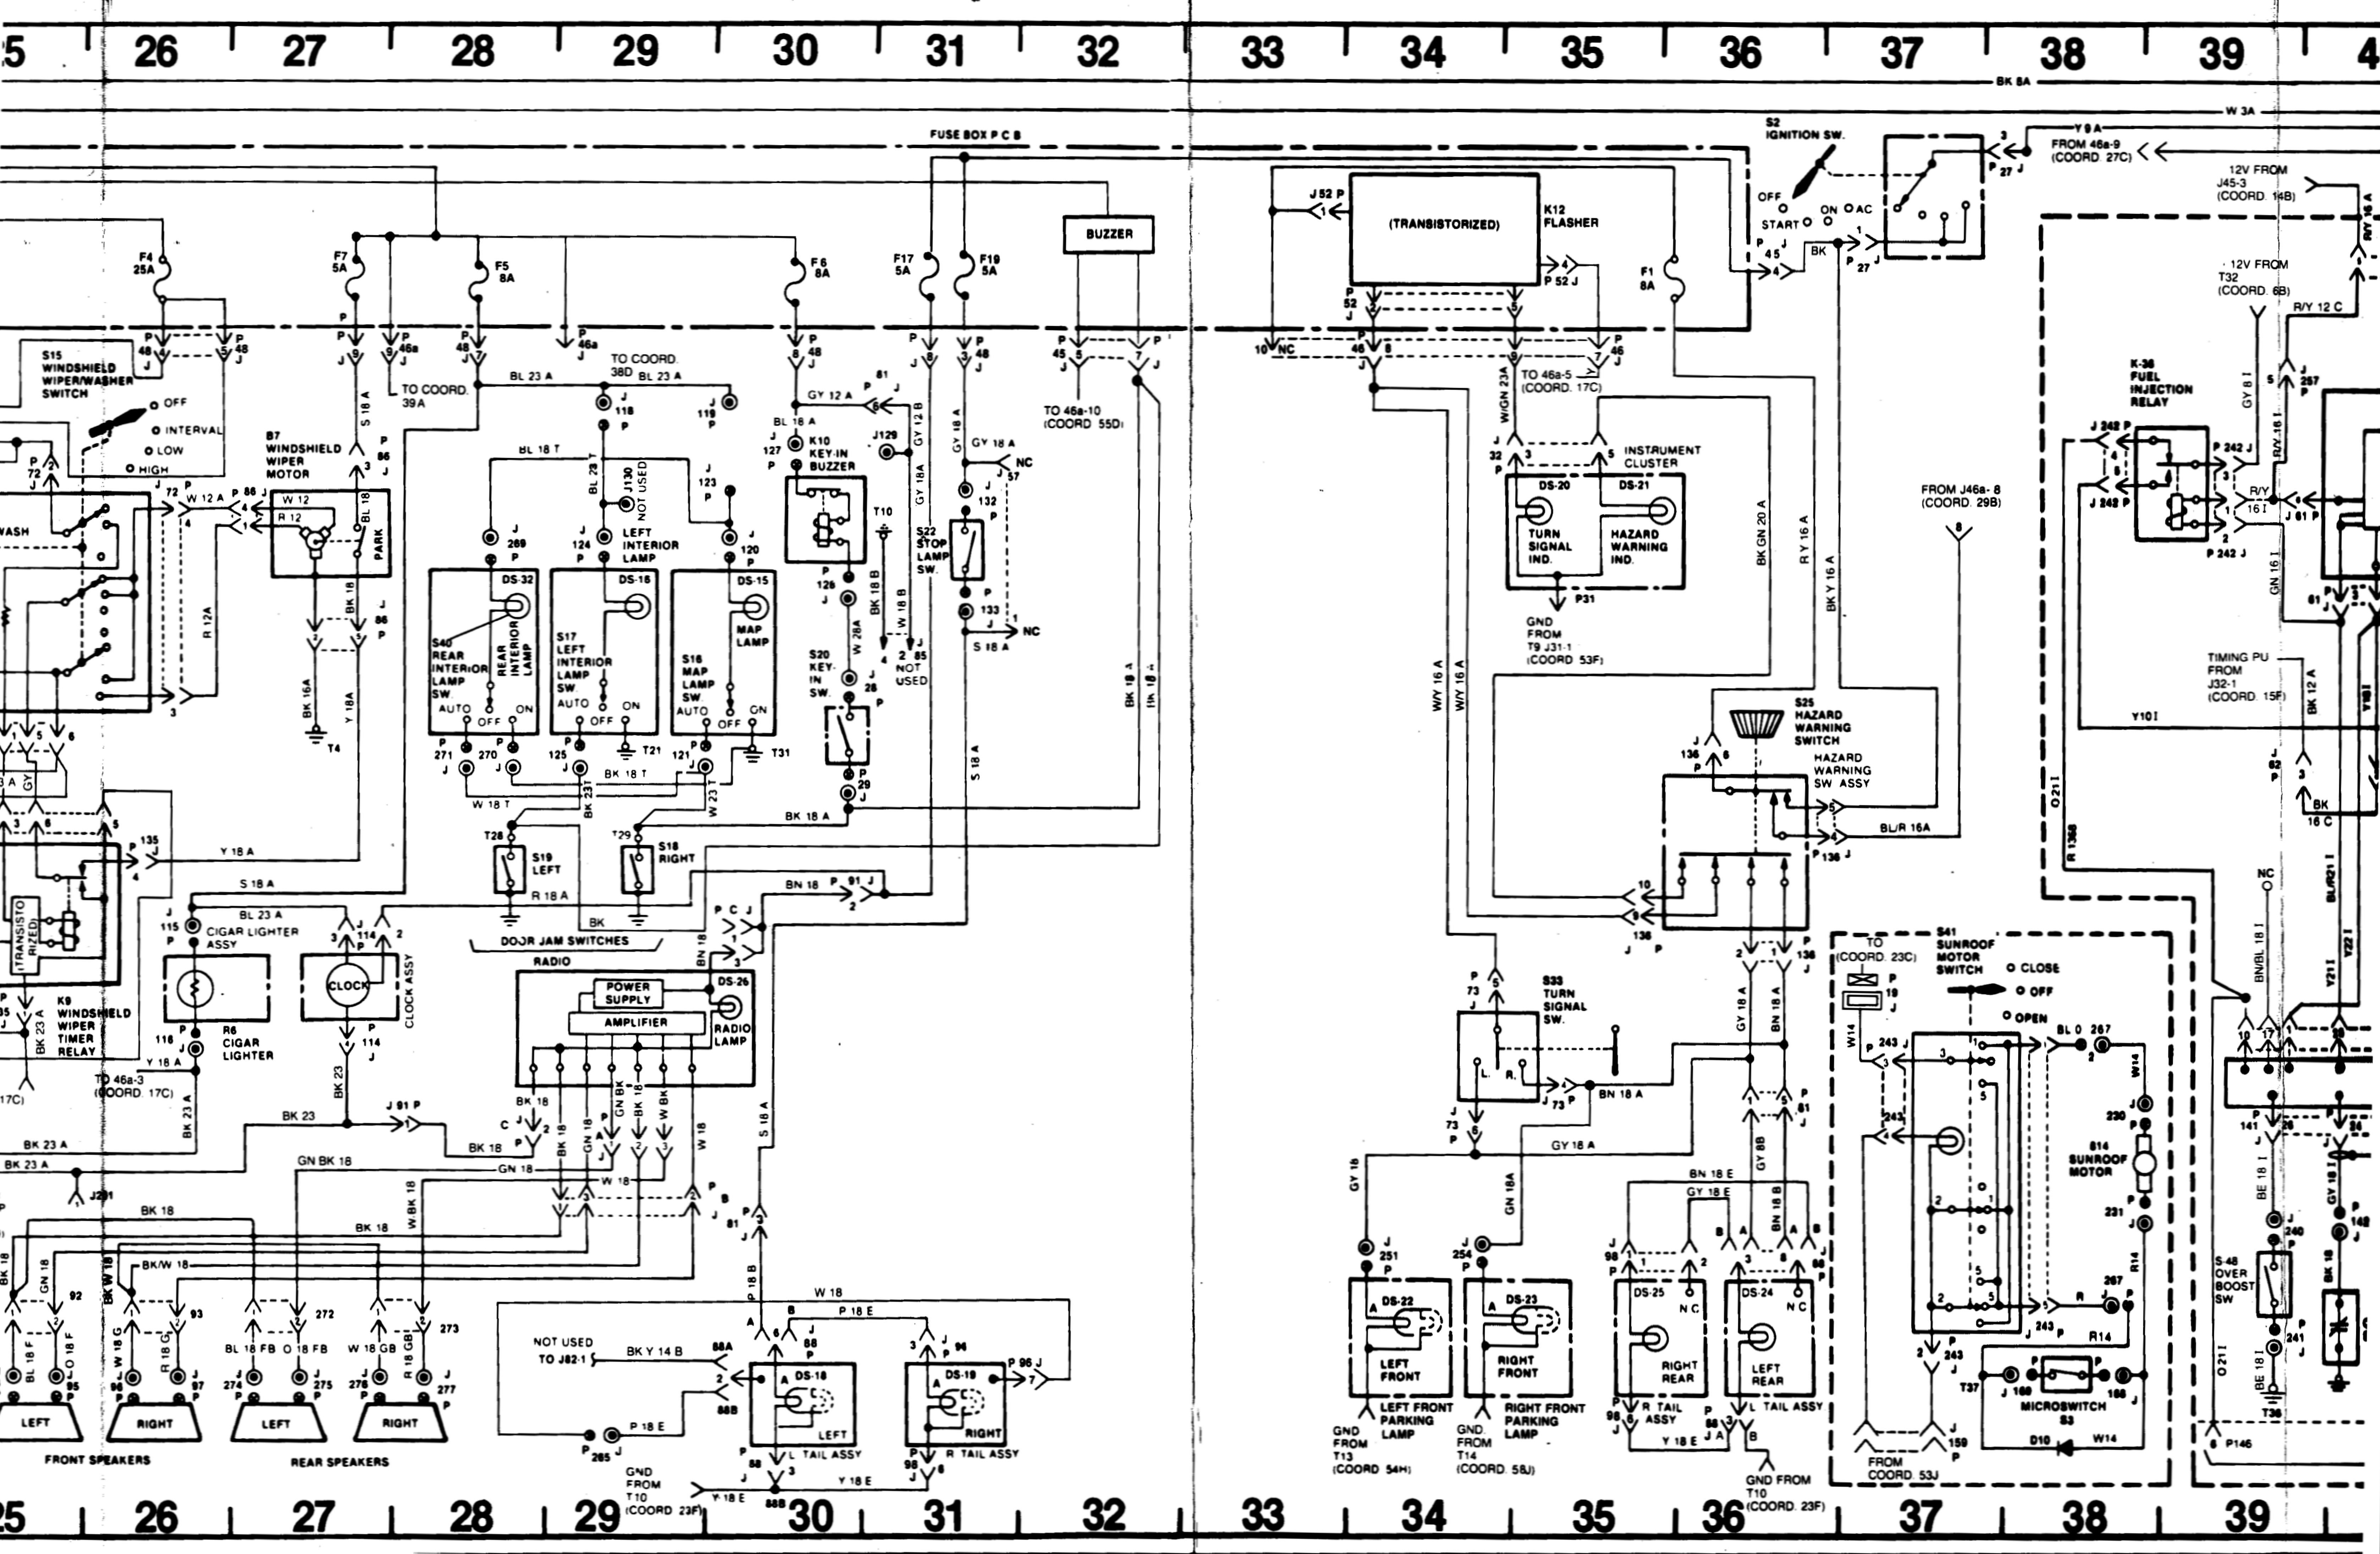

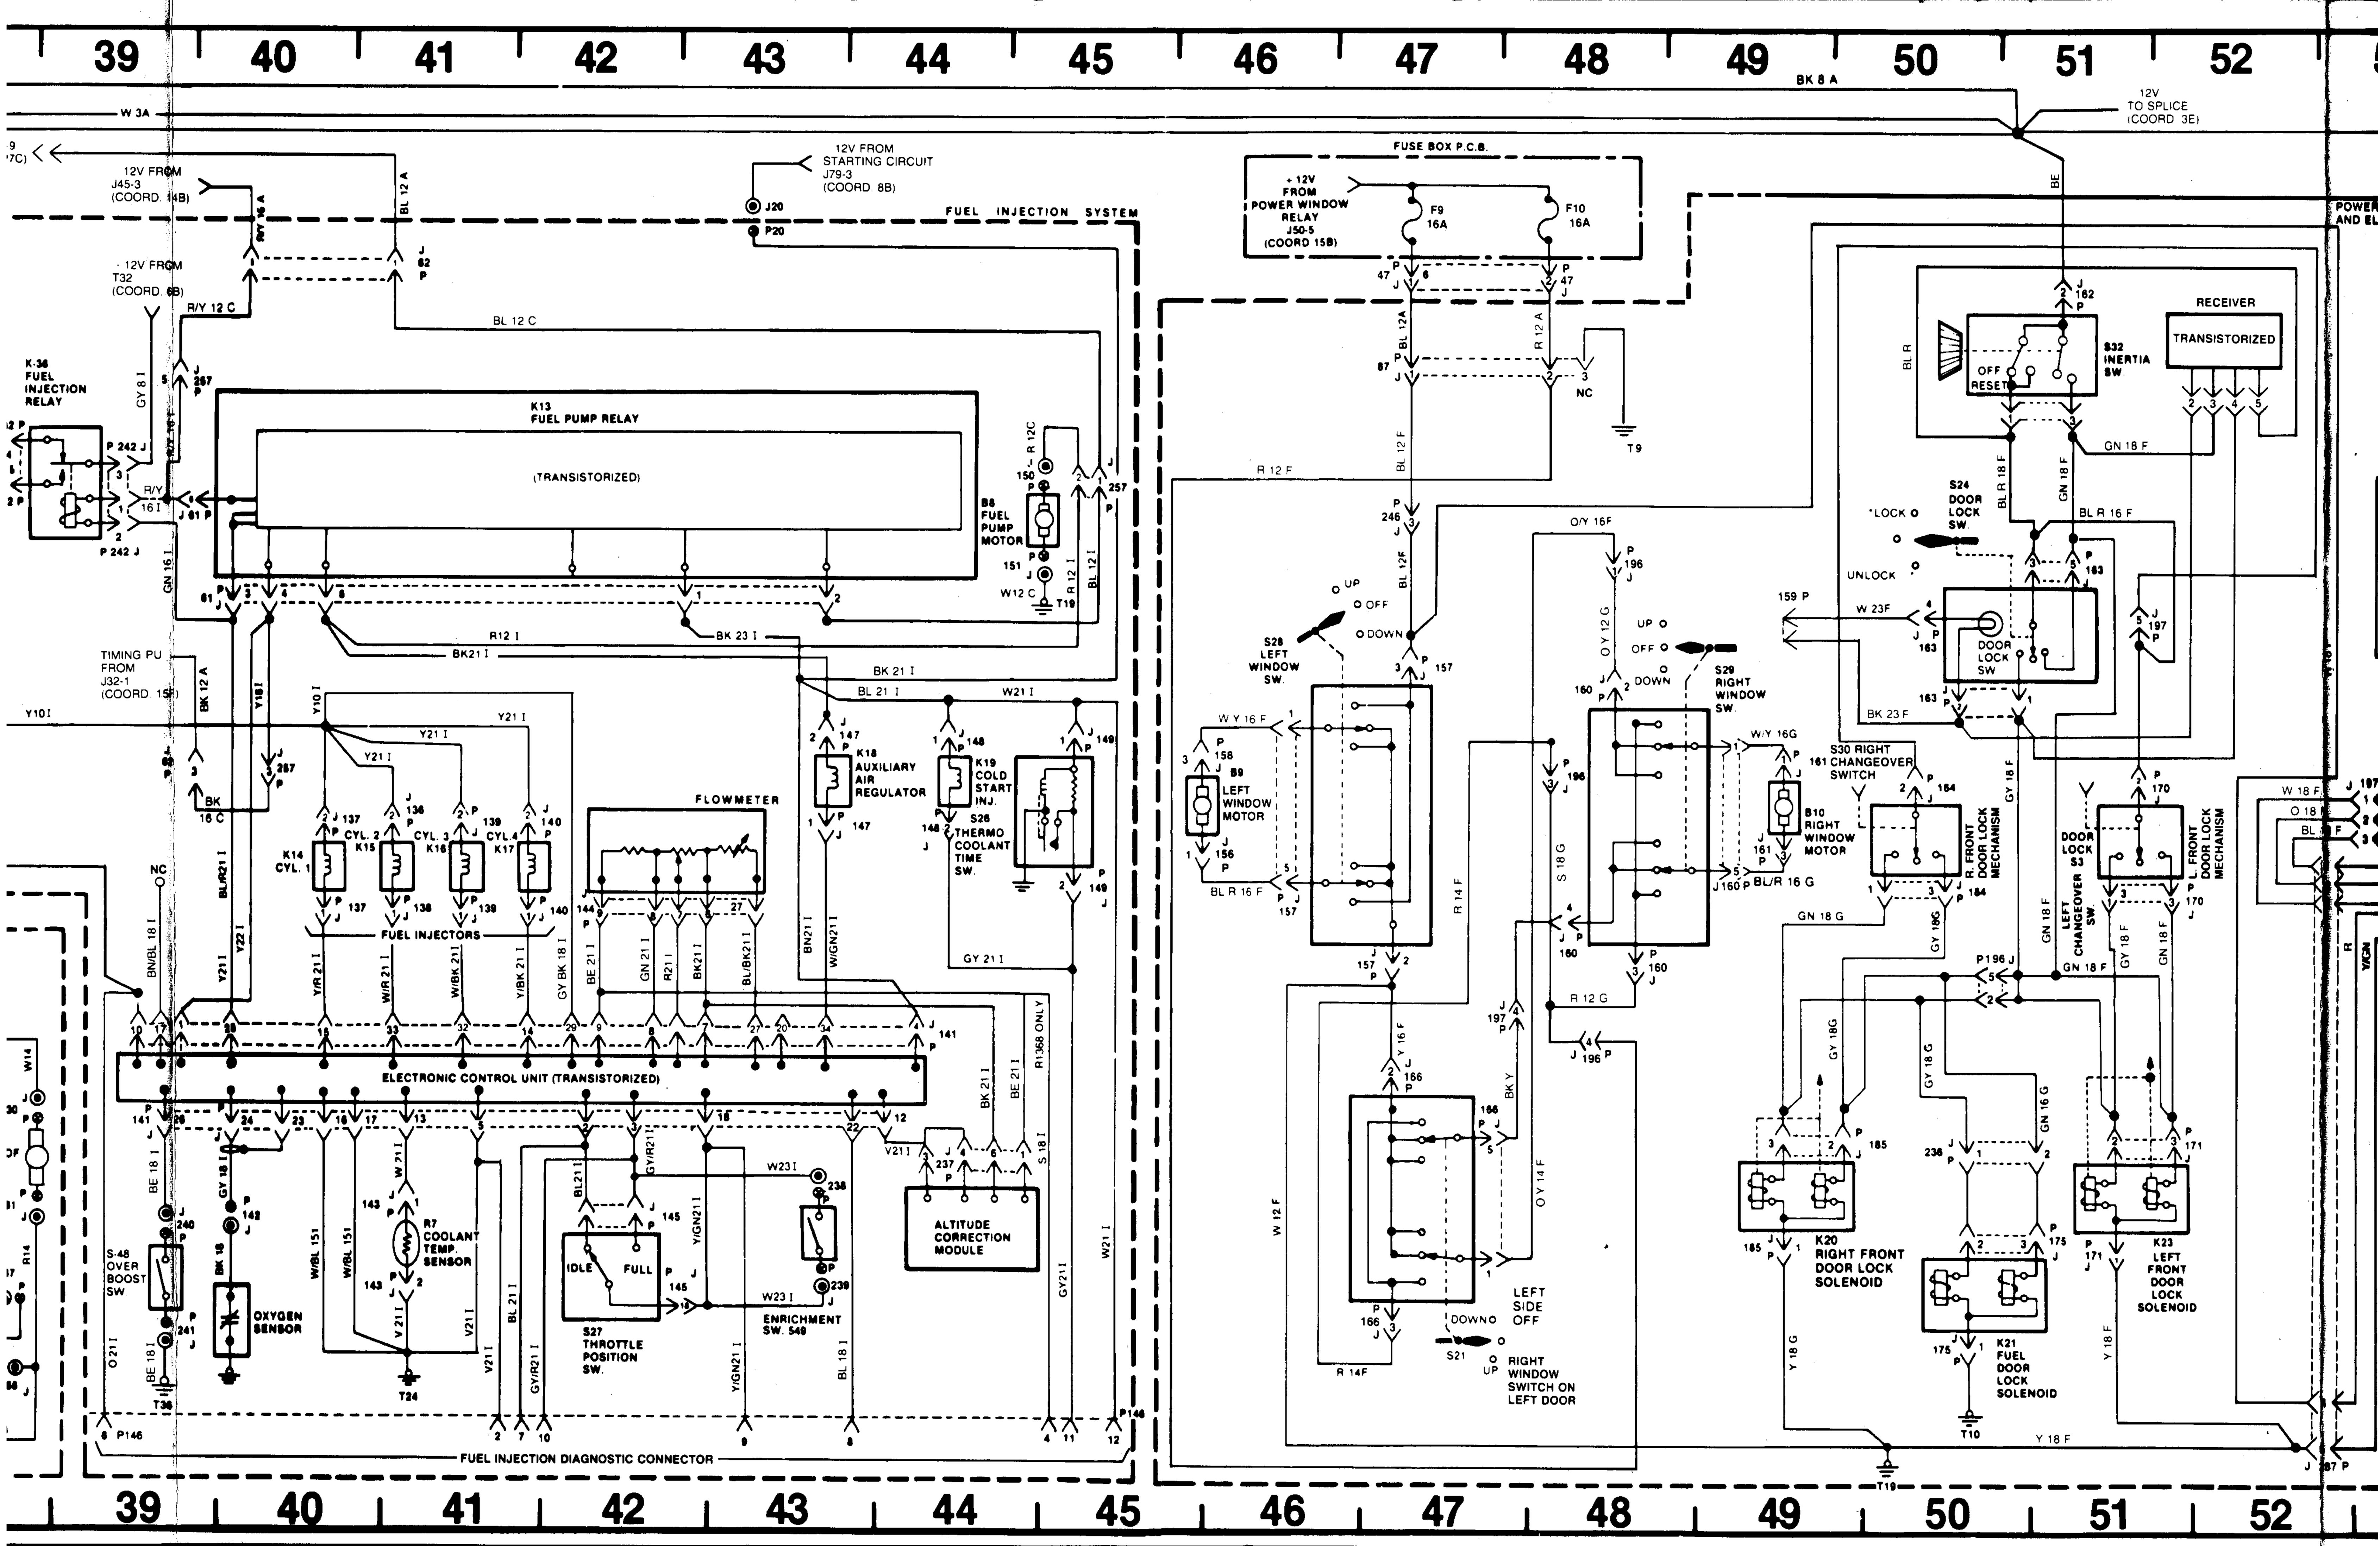

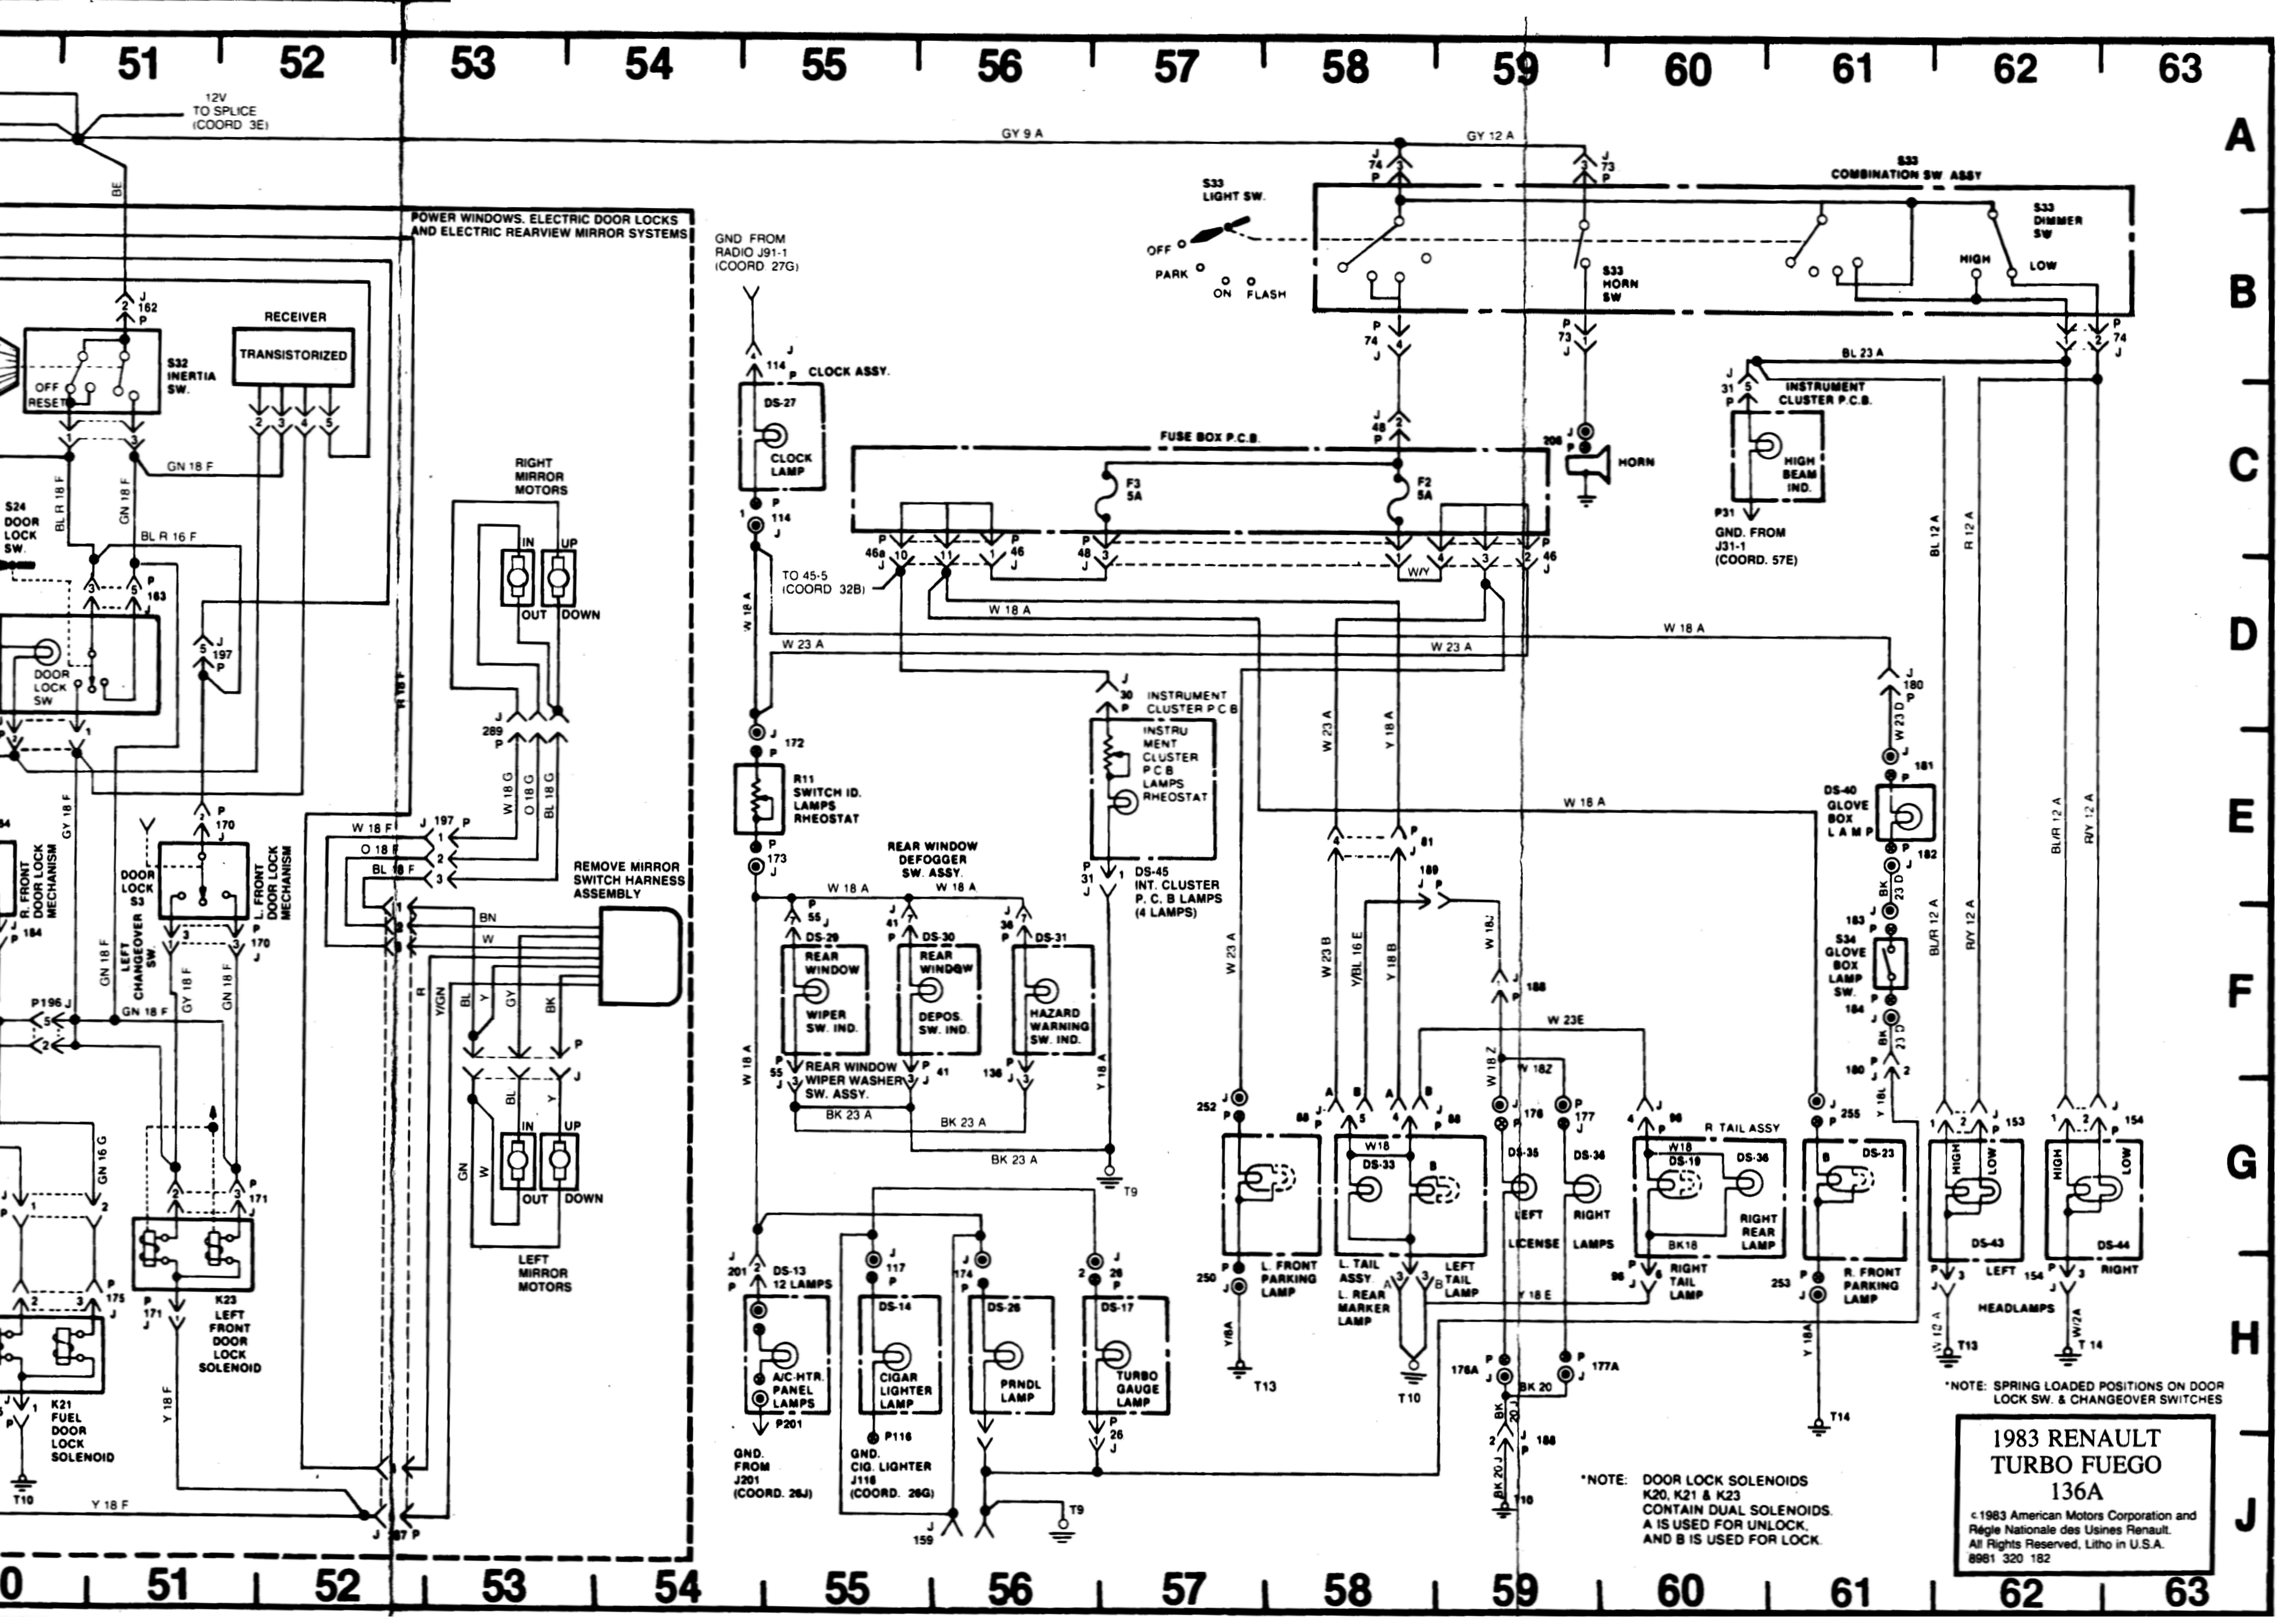



COMPONENT	GRID	SYMBOL	COMPONENT	GRID	SYMBOL	COMPONENT	GRID	SYMBOL	LUG	GRID	CAR	LOCATIO	N	
C - HEATER CONTROL PANEL			STOP, RIGHT	31J	DS19	SWITCHES								
ASSY. LTERNATOR	3H-4H 2C		TAIL, LEFT TAIL, BIGHT	30J 31J	DS18 DS19	A/C HEATER BLOWER MOTOR A/C HEATER CONTROL PANEL	4H 2H	S37 S39	T1	6A 7A	Positive terminal of b	•		1
UTO. TRANS. DIAGNOSTIC	14D	J17	TURN SIGNAL, IND.	35C	DS20	BACK UP LAMP (MANUAL TRANS)	23D	S7	_	1C. 7A	Negative terminal of Engine ground. Unde		next to oil p	pan
CONNECTOR			TURN SIGNAL, LEFT FRONT TURN SIGNAL, RIGHT FRONT	34H 35H	DS22 DS23	BRAKE FLUID LEVEL IND BRAKE PAD SENSOR, LEFT	16H 17H	S9 S11	ТД	10H,27D.23J	on engine. Ground. Under hood,	rear center of (engine comp	oart.
ATTERY	54	BATTERY	TURN SIGNAL, LEFT REAR	36H	DS24 DS25	BRAKE PAD SENSOR, RIGHT CHANGEOVER, LEFT (DOOR LOCK	17H	S12			ment; on heater blow	er motor suppo	ort bracket.	
RAKE PAD SENSOR, LEFT	17 11	S11	TURN SIGNAL, RIGHT REAR	36H	0323	SYS)	51E	S31	75 76	4A 4B	+ 12V. Under hood, in + 12V. Under hood, in			
RAKE PAD SENSOR, RIGHT	17H	<u>S12</u>	MOTORS:			CHANGEOVER, RIGHT (DOOR LOCK SYS)	50E	S30	T7	18	+ 12V. Under hood, I	-	-	
IGAR LIGHTER ASSY.	27F	R6	A/C BLOWER	10J	B13	COMBINATION	57B. 63 B	\$33	т8	1C	nator. Ground, Under hood	eft front of eng	gine, on alter	n-
AIR CONDITIONING	4F	CB4	AUXILIARY COOLING FAN (A/C SYS.)	7F	В3	COOLANT THERMAL DOOR JAM, LEFT	3C 29E	S1 S19	TO	16C. 15G.	nator. Ground, Inside car, u	der dash- left	of eteering	ļ
AUXILIARY COOLING FAN MOTOR MAIN COOLING FAN MOTOR	6E 4D	CB2 CB1	FUEL PUMP	44C	B8	DOOR JAM, RIGHT	29E	S18		57G. 56J	column, on cowl pan		-	ļ
			HEATER BLOWER MAIN COOLING FAN	- 10G 6D	B2	DOOR LOCK GLOVE BOX LAMP	50D 61E	S33 S34	۲10	58J 30C. 17J.	Ground. Inside lugga	ne compartmen	t right of le	ett
LOCK ASSY. LUTCH A/C COMPRESSOR	12J	DS27 K27	REAR WINDOW WIPER STARTER	18E	B5 B1	HANDBRAKE HAZARD WARNING	16J	S8 S25		50J. 59J	rear tail light.	-		
OMPUTER (AUTO, TRANS)	14E		SUNROOF	38G	B14	HEATER BLOWER MOTOR	30E 4H	S37	T11 T12	1C 11D	Ground. Under hood, Ground. Under hood,			ļ
			WINDOW, LEFT WINDOW, RIGHT	46E 49E	B9 B10	HIGH PRESSURE A/C HORN	11H 59C	S43 S33		4E.24E. 62H. 58H	Ground. Under hood,	left front on fra	ame.	ſ
AGNOSTIC CONNECTORS		1.1.7	WINDSHIELD WASHER PUMP	24D	B6	IGNITION	11A, 37A	S2	_	6E. 8F. 61H.	Ground. Under hood,	right front of fe	rame.	1
AUTO. TRANS ENGINE	14D 13 H	J15 P146	WINDSHIELD WIPER NOSE SUPRESSOR	27D 11D	6/ C1	INTERIOR (DOOR LOCK SYS) INTERIOR (AMP. LEFT	51C 29D	S32 S17	T15	2D. 62H	+ 12V. Inside car, lef	side of steerin	na columa: o	00
FUEL INJECTION	39J-45J	P146				KEYIN	30E	S20			light switch.		•	/**
ODES: A/C CIRCUIT	7E	D7	OIL LEVEL SENDER OIL PRESSURE SENDER	20H 16J	S10	LIGHT	15C 57B	S3 S33		14H, 13F. 15C	Ground. Under hood, cylinder head.	right rear of en	ngine; on	ļ
A/C CIRCUIT	7F 3H	D11 D8	OXYGEN SENSOR (F SYSTEM)	40H		LOW PRESSURE A/C	12G	S42	T17		Ground. Under hood,	top center of e	ngine compa	art-
A/C HEATER CONTROL PANEL ALTERNATOR	10	D1-D6	POWER WINDOW SYSTEM	45.49		MAP LAMP MICROSWITCH (A/C SYS)	- 29D 6F	S16 S36	T18		ment frame. Ground, Under hood,	on distributor.		
INSTRUMENT CLUSTER P.C.B.	16G. 21G 38J	D9 D10	RADIO	205		MULTI-FUNCTION (AUTO TRANS.)	13E.21D	S4	T19	45D.50D.50J	Ground, Inside car, b	stween A/C blo		and
STRIBUTOR	10E		REAR WINDOW DEFOGGER	17E	R1	OIL PRESSURE SENDER OXYGEN SENSOR MAINT IND	16J 19.1	S10 S13	T20		shift lever, on chassi Ground. Under hood,	on right side o	-	
OR LOCK SYSTEM	49-51		REAR WINDOW DEFOGGER SW	170 565	S5	RADIATORTHERMAL	7C	51	T21		Ground. Inside car, u interior lamp.	-	-	
ECTRONIC FUEL CONTROL UNIT	39F-44F	P141	REAR WINDOW WIPER MOTOR	17C. 56F		REAR INTERIOR LAMP REAR WINDOW DEFOGGER	28D	S40	T22	17E	Ground. Inside lugga		nt, on lower	
ECTRONIC IGNITION CONTROL			ASSY. REAR WINDOW WIPER SW ASSY	18E 19C	85 56	REAR WINDOW WIPER	19C	S ₆	T24	41.1	right lift gate bracket Ground. Under hood,		der head on	<u> </u>
INIT GINE DIAGNOSTIC CONNECTOR	13H	J15	RELAYS, SOLENOIDS, ETC	130		SEAT BELT SPEED CONTROL	24H 33E	514 523A		_	throttle cable bracke	i		1
		K12	A/C #1 A/C #2	6G	K4 K32	-] P	201	S23A. S23B	T26 T27	7J. 12J. 37J 19E	Ground, Inside car, In Ground, Inside lugga			
SHER OWMETER (FUEL INJECTION	358	N12	A/C #3	8J	K33	MICROSWITCH SUNROOF	38J 31D	S46 S22			dow wiper motor bra	cket.		
YSTEM)	42E		A/C #4 A/C #5	8G	K31 K26	SUNROOF MOTOR	37F-37H	S41	T28 T29		Ground. Inside car, o Ground. Inside car, o	•		ļ
EL INJECTION DIAGNOSTIC	39J-45J	P146	A/C #6	6J	K27	THERMAL COOLANT TIME THROTTLE POSITION (F.I. SYS.)	44F 42H	S26 S27	T30	•	Ground. Inside car, o	n A/C-heater co		
EL INJECTION SYSTEM	17H	R3	A/C FAST IDLE SOLENOID AUTOMATIC TRANS. (EL-1)	11H 14F	K24 K28	TURN SIGNAL	35F	\$33	T31	30E	(where diode "D8" is Ground. Inside car, u	-	in front of r	map
SES: ANEL P.C.B.	14B-36B	F12 F16 F13	AUTOMATIC TRANS. (EL-2)	14E	K29	WINDOW, LEFT WINDOW, RIGHT	40E 48E	S28 S29		1	lamp.			
		F11 F8 F15 F4		43E	К18	WINDOW, FIGHT (LEFT SIDE) WINDSHIELD WIPER/WASHER	47H 25D	S21	T32	18	Ground. Under hood, shock absorber towe	•	re wall near	1
	46A-48A	F17 F19 F1	AUXILIARY COOLING FAN MOTOR			WINCOMELO WIFERWASHER	230	\$15	T35	4E.51A	+ 12V. Inside car, lef switch.	t of steering co	olumn by ligh	лt
PANEL P.C.B. PANEL P.C.B.	55C-59C	F9, F10, F2, F3	(WITH A/C ONLY) COLD START INJECTOR	5E 44E	K3 K19				⊤36	39H	Ground. Under hood	-	acket for tu	rbo
UGES:			DOOR LOCK SOLENOID LEFT	51G	K23	TAIL LAMP ASSY., LEFT TAIL LAMP ASSY., RIGHT	30J, 58G	DS18	T37	37.J	safety switch on fire Connection. Inside c		anel to surve	oof
FUEL	18F	M2	DOOR LOCK SOLENOID RIGHT	49G 35 B	K20 K12	THERMOSTAT (A/C SYS.)	31J, 60G 9E	DS19 R8	1.37		motor housing.			
	20F 15F	M3 M1	FUEL DOOR LOCK SOLENOID	50H	K21	TOP DEAD CENTER SENSOR	<u>14H</u>	L2						
NATER TEMPERATURE	15F	M4	FUEL INJECTION FUEL INJECTOR #1	39C 40E	K36 K14	VOLTAGE REGULATOR	2C							
GOVERNOR (AUTO. TRANS.)	14F		FUEL INJECTOR #2	41E	K15 K16	WATER TEMP. SENDER (ENGINE)	15J	R2						ļ
	36E	S25	FUEL INJECTOR #3 FUEL INJECTOR #4	41E 42E	K17	WATER TEMP. SENDER (F.I. SYS.)	41H	R7			1			/
ZARD WARNING SWITCH ASSY.	59C	323	FUEL PUMP	40C-44C	K13A K13B									
NITION COIL	11D	11	IGNITION ON	17B	K7	3								ļ
NITION SENSOR (DISTRIBUTOR)	10F		KEY-IN BUZZER MAIN COOLING FAN MOTOR	30C 3D	K10 K2	Í I								
NITION SWITCH ASSY. STRUMENT CLUSTER P.C.B.	11A, 37A 15F-21F, 35C, 57E	S2	POWER WINDOW	15B	K6	i							-	ļ
	61C		REAR WINDOW DEFOGGER REAR WINDOW WIPER MOTOR	23B 18E	K25 K30	L. L			1					ļ
MPS.		-1	SEAT BELT BUZZER SPEED SENSOR	24F	K8									ļ
A/C HEATER CONTROL PANEL	c e Li		STARTER (AUTO TRANS.)	33H 9B	K11 K5	[
(2 LAMPS) BACK-UP, LEFT	22F	DS13 DS11	STARTER SOLENOID WINDSHIELD WIPER TIMER	4A 25F	K1 K9						HARNESS	ES		
BACK-UP, RIGHT	23F	DS12 DS2		2.5							ARNESS			·
RAKE IND	17F	DS4	RESISTANCES			j j						<u> </u>		
HARGE IND.	15F 55H	DS1 DS14	CIGAR LIGHTER	26F	R6				B	Front Mai Rear Mair		Engine A/C Intern	nediate	
LOCK	55C	DS27	COOLANT TEMP SENDER COOLANT TEMP SENSOR (FI	15J	R2				c		ip and Relay T		amp or Map	
OOR LOCK SWITCH IND. ASTEN SEAT BELT IND.	50D 21F	S33 DS10	SYS)	41H	R7				D	Glove Box	x Lamp'	Reading	g Light	
LOVE BOX	61F	DS40	FUEL SENDER INST CLUSTER LAMP RHEOSTAT	17H 56E	R3 R10				E	Tail Lamp		Fuel Door EGR Sole		
AZARD WARNING IND. AZARD WARNING SWITCH IND.	35C 56F	DS21 DS31	LOW FUEL IND SENDER	18H	R4				'	Door Loci Left	ks/Power Windows. V W		noio I Cóoling Fa	an
EADLAMP, LEFT	62G	DS43	OIL LEVEL SENDER REAR WINDOW DEFOGGER	20H 17E	R5 R1				G	Door Loc	ks/Power Windows.	Motor	•	
EADLAMP, RIGHT IGH BEAM IND.	63G 61C	DS44 DS42	SWITCH LAMPS RHEOSTAT	55E	R11					Right Seat Belt	X	Left Inter		
STRUMENT CLUSTER (5 LAMPS)	56E	D\$45	THERMOSTAT (A/C SYS)		R8					Fuel Inject	ction		late Lamps	
TERIOR, LEFT CENSE PLATE, LEFT	29D 59G	DS16 DS35	SENDERS AND SENSORS				-		Ĵ	Fuel Tani	k F8		-	
CENSE PLATE, RIGHT	59G	DS36	BRAKE PAD SENSORS (LEFT & RIGHT)	17H	S11-S12		1		ĸ	Sunroof	GA SA		ar Speaker nostat and D	Piode
OW FUEL IND. OW FUEL IND	30D	DS6 DS15	COOLANT TEMP SENDER	15J	R2						amp/Glove Box			
IAP	300	DS15 DS15	SYS)	· 41H	R7		1		0		id Wear Warning ic Connector			
T GATE SUPPORTS (RIGHT AND EFT)	21E		FUEL SENDER	17H	R3 R4				ľ	Engine				
AKER, LEFT REAR	58G	DS33 DS38	OIL LEVEL SENDER	18H 20H	R5		1							
RKER, RIGHT REAR	17F	DS3	OIL PRESSURE SENDER OXYGEN SENSOR (F 1 SYS)	16J	S10						WIRE	5		
YGEN SENSOR MAINT IND RKING, LEFT FRONT	19F 57G	DS7 DS22	SPEED SENSOR	40H 33H	К11				COD	ECOLO			T	,
RKING, RIGHT FRONT	61G	DS23	TOP DEAD CENTER SENSOR	14H	L2				F		·		╉┉──┤	
I.N.D.L	56H 30F	DS26	SOLENOIDS (SEE RELAYS) SPARK PLUGS	8D		Í	1		BE		BN Brown	P Pink		Violet
AR INTERIOR	28D	DS28 DS32	SPEAKERS SPEED CONTROL REGULATOR	25J-28J 30F-33F					BK		GN Green	R Red S Salmon		White Yellow
AR WINDOW DEFOGER IND	20F 56F	DS9 DS30	SPEED CONTROL SERVO	31H					BL	Blue	GY Gray O Orange	5 Salmon		, ej• ∪ ₩
AR WINDOW DEPOGER SW IND	55F	DS29	SPEED CONTROL SYSTEM SPEED SENSOR	31-33 33H			1	1	h					
OP, LEFT	30H	DS18	SPEED SENSOR	330	1	1		1	Δ11 -	WITES 2TO IN	entilled with a code F	or example Ri		

